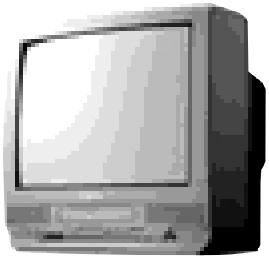

Omnivision VHS

Panasonic

Combination VCR
Operating Instructions
Model No. PV-C2061/PV-C2081

- Initial Setup and Connection Procedures are on pages 8 to 13.
- SELF-DEMO Procedure is on page 4.

As an ENERGY STAR® Partner, Matsushita Electric Corporation of America has determined that this product or product model meets the ENERGY STAR® guidelines for energy efficiency.

VCR Plus+®

Please read these instructions carefully before attempting to connect, operate, or adjust this product. Please save this manual.
Spanish Quick Use Guide is included.
(Guía para rápida consulta en español está incluida.)

LSQT0332A

For assistance, please call : 1-800-211-PANA(7262) or send e-mail to : consumerproducts@panasonic.com

Important Safeguards and Precautions

READ AND RETAIN ALL SAFETY AND OPERATING INSTRUCTIONS. HEED ALL WARNINGS IN THE MANUAL AND ON UNIT

INSTALLATION

1 POWER SOURCE CAUTION
Operate only from power source indicated on unit or in this manual. If uncertain, have your Electric Utility Service Company or Video Products Dealer verify your home power source.

2 POWER CORD PLUG
For safety, this unit has a polarized type plug (one wide blade), or a three-wire grounding type plug. Always hold the plug firmly and make sure your hands are dry when plugging in or unplugging the AC power cord. Regularly remove dust, dirt, etc. on the plug.

POLARIZED PLUG CAUTION:
The plug fits into outlet one way. If it cannot be fully inserted, try reversing it. If it still will not fit, have an electrician install the proper wall outlet. Do not tamper with the plug.

GROUNDING PLUG CAUTION:
The plug requires a three-hole grounding outlet. If necessary, have an electrician install the proper outlet. Do not tamper with the plug.

3 POWER CORD
To avoid unit malfunction, and to protect against electrical shock, fire or personal injury:
- Keep power cord away from heating appliances and walking traffic. Do not rest heavy objects on, or roll such objects over the power cord.
- Do not tamper with the cord in any way.
- An extension cord should have the same type plug (polarized or grounding) and must be securely connected.
- Overloaded wall outlets or extension cords is a fire hazard.
- Frayed cords, damaged plugs, and damaged or cracked wire insulation are hazardous and should be replaced by a qualified electrician.

4 DO NOT BLOCK VENTILATION HOLES
Ventilation openings in the cabinet release heat generated during operation. If blocked, heat build-up may result in a fire hazard or heat damage to cassettes.
For your protection:
a. Never cover ventilation slots while unit is ON, or operate unit while placed on a bed, sofa, rug, or other soft surface.
b. Avoid built-in installation, such as a book case or rack, unless properly ventilated.

5 AVOID EXTREMELY HOT LOCATIONS OR SUDDEN TEMPERATURE CHANGES
Do not place unit over or near a heater or regulator, in direct sunlight, etc. If unit is suddenly moved from a cold place to a warm place, moisture may condense in unit and on the tape causing damage.

6 TO AVOID PERSONAL INJURY
- Never place unit on support or stand that is not firm, level, and adequately strong. The unit could fall causing serious injury to a child or adult and damage to the unit.
- Move any appliance and cart combination with care. Quick stops, excessive force, and uneven surfaces may cause objects to overturn.
- Carefully follow all operating instructions.

OUTDOOR ANTENNA INSTALLATION

1 SAFE ANTENNA AND CABLE CONNECTION
An outside antenna or cable system must be properly grounded to provide some protection against built up static charges and voltage. Section 810 of the National Electrical Code, ANSI/NFPA 70 (in Canada, part 1 of the Canadian Electrical Code) provides information regarding proper grounding of the mast and supporting structure, grounding of the lead-in wire to an antenna discharge unit, size of grounding conductors, location of antenna discharge unit, connection to grounding electrodes, and requirements for the grounding electrode.

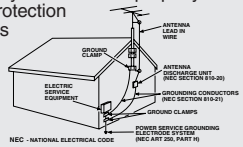
ANTENNA LEAD IN WIRE
GROUND CLAMP
ANTENNA DISCHARGE UNIT (NEC SECTION 810-20)
ELECTRIC SERVICE EQUIPMENT
GROUNDING CONDUCTORS (NEC SECTION 810-21)
GROUND CLAMPS
POWER SERVICE GROUNDING ELECTRODE SYSTEM (NEC ART 250, PART H)
NEC - NATIONAL ELECTRICAL CODE

2 KEEP ANTENNA CLEAR OF HIGH VOLTAGE POWER LINES OR CIRCUITS
Locate an outside antenna system well away from power lines and electric light or power circuits so it will never touch these power sources should it ever fall. When installing antenna, absolutely never touch power lines, circuits or other power sources as this could be fatal.

USING THE UNIT

Before unit is brought out of storage or moved to a new location, refer again to the INSTALLATION section of these safeguards.

1 KEEP UNIT WELL AWAY FROM WATER OR MOISTURE, such as vases, sinks, tubs, etc.

2 IF EXPOSED TO RAIN, MOISTURE, OR STRONG IMPACT, unplug unit and have it inspected by a qualified service technician before use.

3 ELECTRICAL STORMS
During a lightning storm, or before leaving unit unused for extended periods of time, disconnect all equipment from the power source as well as the antenna and cable system.

4 WHEN UNIT IS PLUGGED IN
• DO NOT OPERATE IF:
- liquid has spilled into unit.
- unit was dropped or otherwise damaged.
- unit emits smoke, malodors, or noises.
Immediately unplug unit, and have it inspected by a service technician to avoid potential fire and shock hazards.
• Never drop or push any object through openings in unit. Touching internal parts may cause electric shock or fire hazard.
• Keep magnetic objects, such as speakers, away from unit to avoid electrical interference.

5 USING ACCESSORIES
Use only accessories recommended by the manufacturer to avoid risk of fire, shock, or other hazards.

6 CLEANING UNIT
Unplug unit. Use a clean, dry, chemically untreated cloth to gently remove dust or debris. DO NOT USE cleaning fluids, aerosols, or forced air that could over-spray, or seep into unit and cause electrical shock. Any substance, such as wax, adhesive tape, etc. may mar the cabinet surface. Exposure to greasy, humid, or dusty areas may adversely affect internal parts.

SERVICE

1 DO NOT SERVICE PRODUCT YOURSELF
If, after carefully following detailed operating instructions, the unit does not operate properly, do not attempt to open or remove covers, or make any adjustments not described in the manual. Unplug unit and contact a qualified service technician.

2 REPLACEMENT OF PARTS
Make sure the service technician uses only parts specified by the manufacturer, or have equal safety characteristics as original parts. The use of unauthorized substitutes may result in fire, electric shock, or other hazards.

3 SAFETY CHECK AFTER SERVICING
After unit is serviced or repaired, request that a through safety check be done as described in the manufacturer's service literature to insure video unit is in safe operating condition.

Safety Precautions/Mesures de sécurité

Warning : To prevent fire or shock hazard, do not expose this equipment to rain or moisture.

Caution : To prevent electric shock, match wide blade of plug to wide slot, fully insert.

Avertissement : Afin de prévenir tout risque d'incendie ou de chocs électriques, ne pas exposer cet appareil à la pluie ou à une humidité excessive.

Attention : Pour éviter les chocs électriques, introduire la lame la plus large de la fiche dans la borne correspondante de la prise et pousser jusqu'au fond.

This video recorder, equipped with the HQ (High Quality) System, is compatible with existing VHS equipment.
Only use those tapes with the VHS mark. It is recommended that only cassette tapes that have been tested and inspected for use in 2, 4, 6, and 8 hour VCR machines be used.
This television receiver provides display of television closed captioning in accordance with §15.119 of the FCC rules.

FCC WARNING : Any unauthorized changes or modifications to this equipment would void the user's authority to operate.

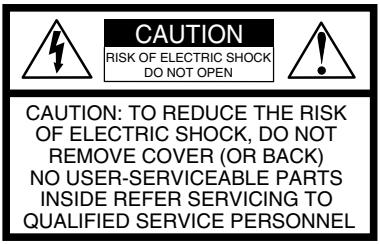
CAUTION
RISK OF ELECTRIC SHOCK
DO NOT OPEN
CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK)
NO USER-SERVICEABLE PARTS INSIDE REFER SERVICING TO QUALIFIED SERVICE PERSONNEL

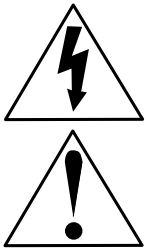

This symbol warns the user that uninsulated voltage within the unit may have sufficient magnitude to cause electric shock. Therefore, it is dangerous to make any kind of contact with any inside part of this unit.

This symbol alerts the user that important literature concerning the operation and maintenance of this unit has been included. Therefore, it should be read carefully in order to avoid any problems.

Before Using

Congratulations

on your purchase of one of the most sophisticated and reliable products on the market today. Used properly, it will bring you and your family years of enjoyment. Please fill in the information below. The serial number is on the tag located on the back of your unit.

Date of Purchase _____
Dealer Purchased From _____
Dealer Address _____
Dealer Phone No. _____
Model No. _____
Serial No. _____

Accessories

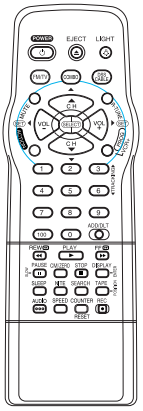

☐ Remote Control
LSSQ0276



☐ Batteries
2 “AA”

To order accessories, call toll free 1-800-332-5368.

SELF-DEMO Mode

With Power ON, press PLAY/REPEAT on the unit for 7 seconds to deactivate the SELF-DEMO Mode.

Repeat this to display demo screen.

Loading the Batteries

1) Open the cover.

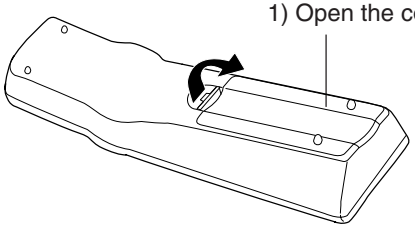

2) Insert batteries as marked.

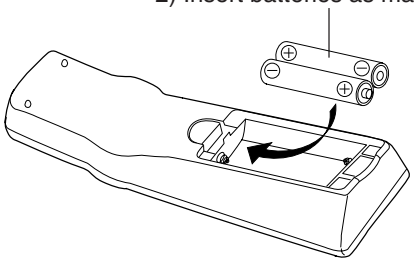

3) Close the cover.

☐ **Battery replacement caution**

- Do not mix old and new batteries.
- Do not mix alkaline with manganese batteries.

Prevent Accidental Tape Erasure

Break off the tab to protect.

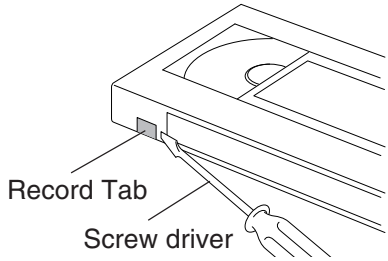

To record again.

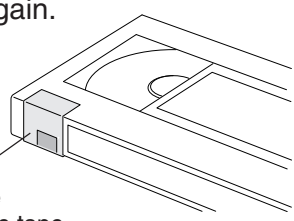

For assistance, please call : 1-800-211-PANA(7262) or send e-mail to : consumerproducts@panasonic.com

Table of Contents

Important Safeguards and Precautions / Safety Precautions 2
Before Using 4
Table of Contents 5
Location of Controls 6
Initial Setup for ANT. / Cable Connection 8
Initial Setup for DSS / Cable box Connection 10

Reset Language, Channels, Clock, Time Zone Adjust 12
Playback a Tape 14
Record On a Tape 14
Copy Your Tapes (Dubbing) 15

TV Operation 16
MTS Broadcast / TV Stereo System 17
TV Timer Features 18
Closed Caption System 20
Picture Adjustment 21
FM Radio / FM Transmitter (Model PV-C2081 only) 22

Timer Recording 24
Timer Programming using VCR Plus+® System 26

Cable Box Universal Remote Control Feature 28
Tape Operation 30
Special VCR Features 33
V-Chip Control Feature 37
Audio Features (Model PV-C2081 only) 40

On-Screen Display (OSD) 41
Unit Information 42
Before Requesting Service 43
Service Center List 44
Limited Warranty 45
Spanish Quick Use Guide / Guía para rápida consulta 46
Index 48

Location of Controls

Remote Control Buttons

Light Tower™ Illuminated Remote Control

LIGHT button:
When LIGHT is pressed, available buttons in the selected mode light up and the selected mode button (COMBO or DSS CABLE) flashes for 5 seconds. If no button is pressed, light goes out in 5 seconds to conserve batteries. Also, by holding down a button, you can confirm the selected mode (mode button will flash) in the dark.

EJECT button:
When EJECT is pressed, the tape is ejected from Cassette Compartment.
If EJECT is pressed during recording, the unit will not respond to the command.

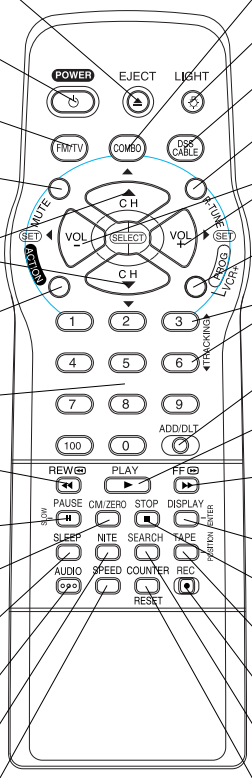

EJECT
Page 6

POWER
Page 8

FM/TV
Page 22

MUTE
Page 16

CHANNEL UP/DOWN Pg. 16
SELECT UP/DOWN Pg. 13

ACTION
Page 12

NUMBER KEYS
Page 16

REWIND/SEARCH
Page 14

PAUSE/SLOW
Page 14

CM/ZERO
Page 32

SLEEP
Page 19

AUDIO
Page 17

NITE
Page 16

SPEED
Page 14

COMBO
Page 28

LIGHT
Page 6

DSS CABLE
Page 28

RAPID TUNE
Page 16

VOLUME UP/DOWN Pg. 16
SET/BACKSPACE Pg. 13

PROGRAM Page 24
VCR Plus+ Page 26

TRACKING UP/DOWN
V-Lock Page 42

ADD/DELETE
Page 13

PLAY
Page 14

FAST FORWARD/SEARCH
Page 14

ENTER Page 28
DISPLAY Page 41

STOP
Page 14

TAPE POSITION
Page 31

REC
Page 14

SEARCH
Page 30

COUNTER RESET
Page 32

For assistance, please call : 1-800-211-PANA(7262) or send e-mail to : consumerproducts@panasonic.com

Front View of the unit and Indicators on the Front Panel

<Model PV-C2061 unit shown>

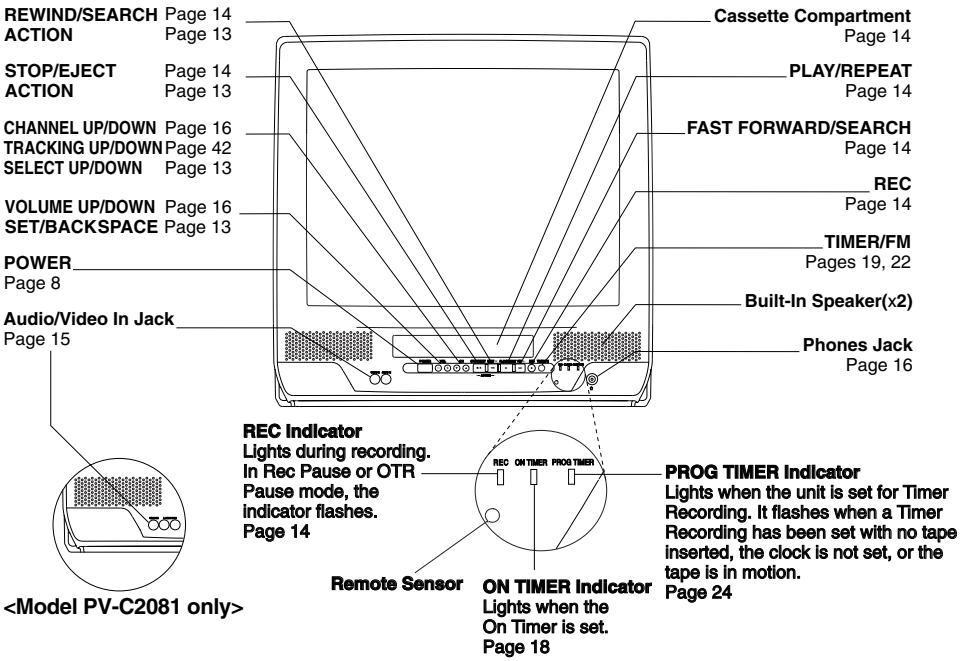

Rear View of the unit

<Model PV-C2081 unit shown>

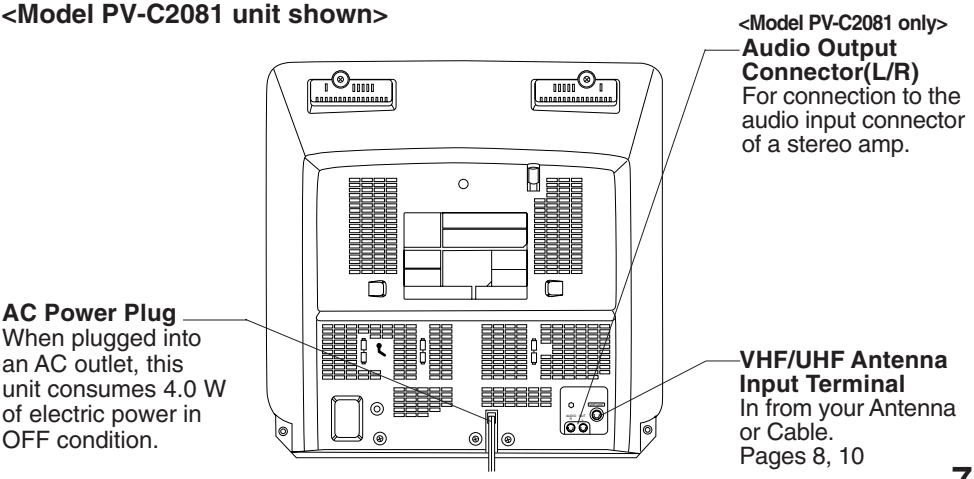
<Model PV-C2081 only>
Audio Output Connector(L/R)
For connection to the audio input connector of a stereo amp.
AC Power Plug
When plugged into an AC outlet, this unit consumes 4.0 W of electric power in OFF condition.
VHF/UHF Antenna Input Terminal
In from your Antenna or Cable.
Pages 8, 10

Initial Setup for ANT. / Cable Connection

How to Connect

■ **Connect the Cable from Antenna / Cable to the VHF / UHF terminal on unit.**

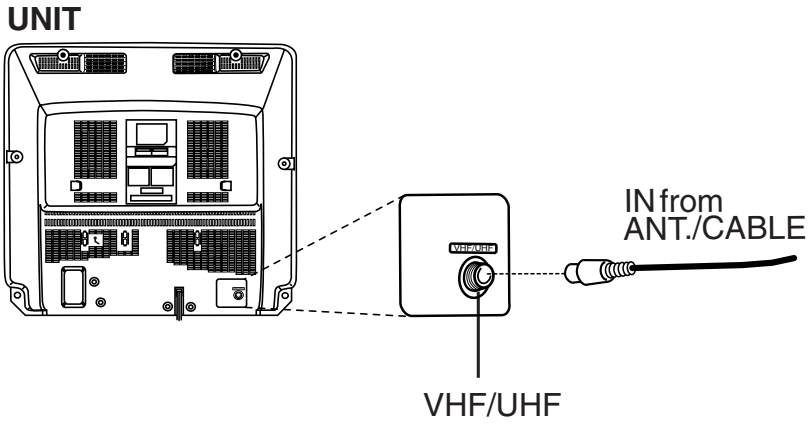

How to do Initial Setup

Press COMBO for Combo mode.

1 **Press POWER* on the remote or unit.**

2 **When the unit is turned on the first time, SELECT LANGUAGE screen appears.**

• If wrong language is set, complete “Reset all unit Memory Functions” steps page 9.

3 **Press CH ▲** to select English.
OR
Press CH ▼ to select Spanish (Español).
OR
Press VOL + to select French (Français).
CHANNEL/CLOCK AUTO SET screen appears.

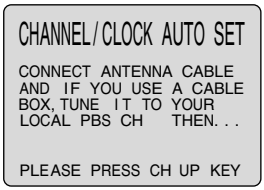
CHANNEL/CLOCK AUTO SET
CONNECT ANTENNA CABLE AND IF YOU USE A CABLE BOX, TUNE IT TO YOUR LOCAL PBS CH THEN. . .
PLEASE PRESS CH UP KEY

WARNING:
When using “Nut type” RF coaxial cables, tighten with fingers only. Overtightening may damage terminals.

For assistance, please call : 1-800-211-PANA(7262) or send e-mail to : consumerproducts@panasonic.com

*Important: if a remote control button does not work when pressed, press the COMBO button on the remote and try the button again.

4 **Press CH ▲** Key to start CHANNEL / CLOCK AUTO SET operation. Settings are performed automatically. If the setup is completed, the following screen is displayed.

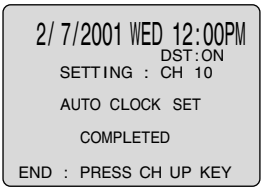

If AUTO CLOCK SET IS INCOMPLETE screen appears, set the clock using MANUAL CLOCK SET procedure as below.

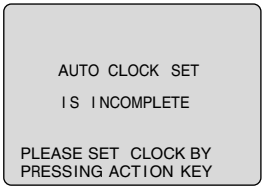

MANUAL CLOCK SET

If AUTO CLOCK SET was incomplete, manually set the clock as follows.

1 **Press ACTION** Key on the Remote to display SET CLOCK Menu screen.

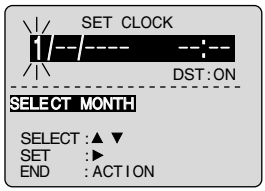

2 **Press ▲▼** to select the month and **press ▶** to set. In the same manner, select and set the date, year, time, and DST. (Daylight Saving Time)

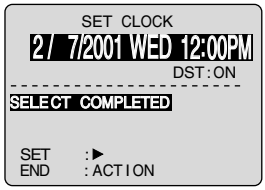

3 **Press ACTION** Key twice to start CLOCK and exit.

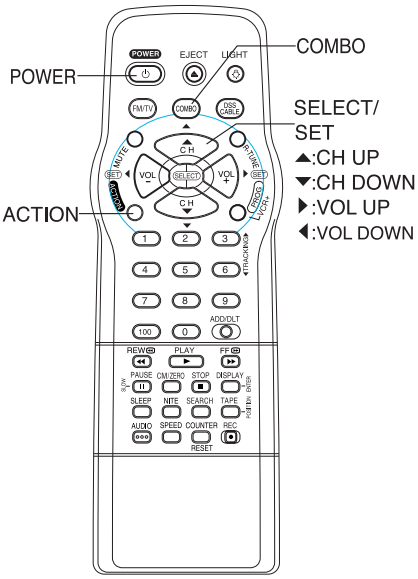

Reset all unit Memory Functions

When moving unit to a new location, or if a mistake was made in the Initial Setup section.

- Make sure a tape is not inserted in the unit.

<Model PV-C2061 unit shown>

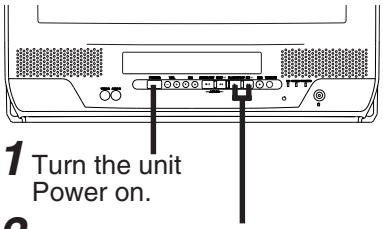

1 Turn the unit Power on.

2 Press and hold both **PLAY** and **FF** on the unit for more than 5 seconds.
- The power will shut off.
- Please ignore “NO CASSETTE” warning.

3 Do “Initial Setup” on page 8.

Initial Setup for DSS / Cable box Connection

How to Connect

■ **Connect the OUT Jack on your cable box to the VHF/UHF terminal on unit with an RF cable.**

Note to CABLE System Installer
This reminder is provided to call the CABLE (Cable TV) System Installers attention to Article 820-40 of the NEC that provides guidelines for proper grounding and, in particular, specifies that the cable ground shall be connected to the grounding system of the building, as close to the point of cable entry as practical.

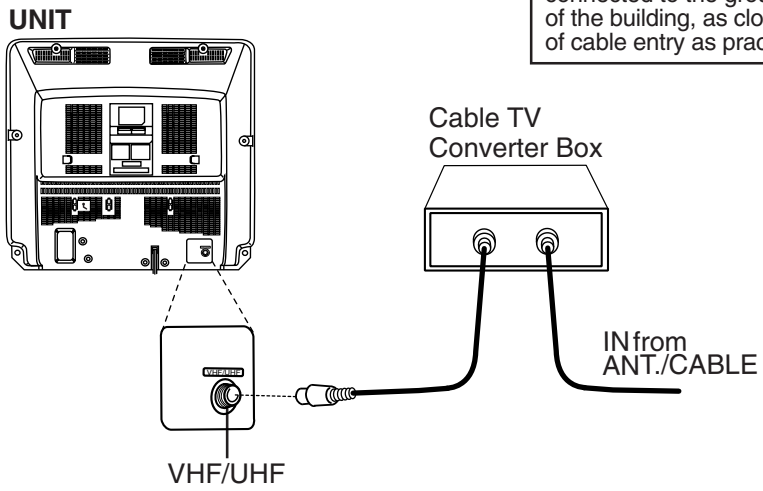

How to do Initial Setup

Press COMBO for Combo mode.

1 **Press POWER* on the remote or unit.**

2 **When the unit is turned on the first time, SELECT LANGUAGE screen appears.**

- **Turn on your cable box and set it to PBS(Public Broadcast Station) channel in your time zone. If you use DSS receiver, it must be turned off.**

WARNING:
When using “Nut type” RF coaxial cables, tighten with fingers only. Overtightening may damage terminals.

3 **Press CH ▲** to select English.
OR
Press CH ▼ to select Spanish (Español).
OR
Press VOL + to select French (Français).
CHANNEL/CLOCK AUTO SET screen appears.

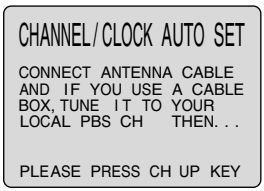
CHANNEL/CLOCK AUTO SET
CONNECT ANTENNA CABLE AND IF YOU USE A CABLE BOX, TUNE IT TO YOUR LOCAL PBS CH THEN. . .
PLEASE PRESS CH UP KEY

- If wrong language is set, complete “Reset all unit Memory Functions” steps page 9.

For assistance, please call : 1-800-211-PANA(7262) or send e-mail to : consumerproducts@panasonic.com

*Important: if a remote control button does not work when pressed, press the COMBO button on the remote and try the button again.

4 **Press CH ▲** Key to start CHANNEL / CLOCK AUTO SET operation. Settings are performed automatically. If the setup is completed, the following screen is displayed.

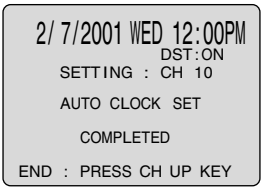

If AUTO CLOCK SET IS INCOMPLETE screen appears, set the clock using MANUAL CLOCK SET procedure on page 9.

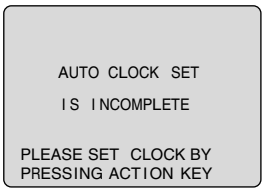

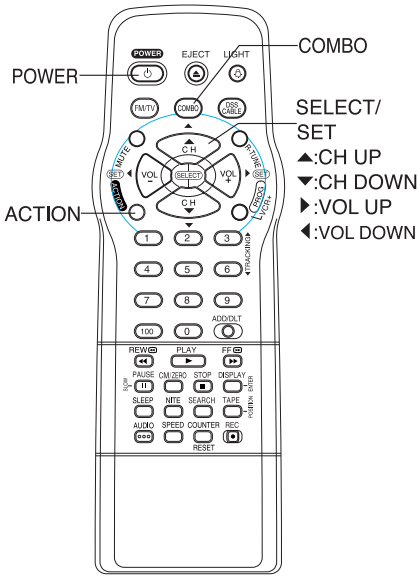

Cable Box Setup

1) **Press ACTION.**

2) **Press ▲▼◀▶** to select “CH.”

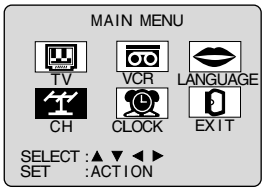

3) **Press ACTION.**

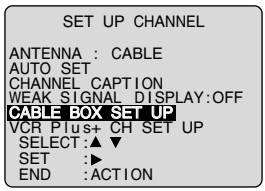

4) **Press ▲▼** to select CABLE BOX SET UP and **press ▶**.



5) **Press ▲▼** to select “YES” or “NO” and **press ▶**.

- If you select...

■ “YES” ➔ Step 6).

■ “NO” ➔ **Press ACTION** three times to exit.



6) **Press ▲▼** to select the same channel as your cable box or DSS receiver output channel, then **press ▶**.

- If necessary, refer to your cable box manual.
- If you are using Audio/Video jack connection for your cable box, select and set “VIDEO OUT” as the output channel.

7) **Press ACTION** three times to exit.

Reset Language, Channels, Clock,

1

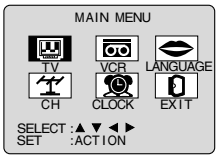

Press ACTION*
to display MAIN MENU.

2

■ Language

1) **Press ▲▼◀▶** to select language icon.

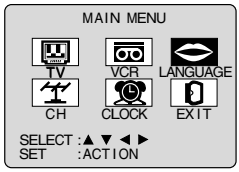

2) **Press ACTION** repeatedly.

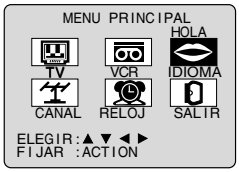

For Spanish

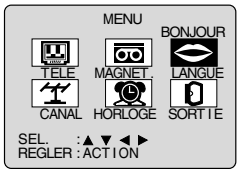

For French

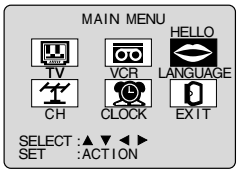

For English

3) **Press ▲▼◀▶** to select “EXIT.” **Press ACTION** to exit.

■ Channels

1) **Press ▲▼◀▶** to select “CH.”

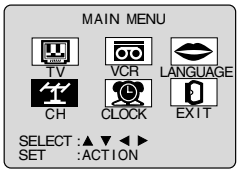

2) **Press ACTION.**

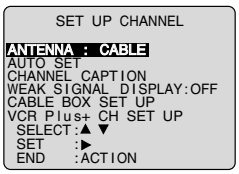

3) **Press ▲▼** to select “ANTENNA,” then **press ▶** to set your antenna system (“TV” or “CABLE”).

4) **Press ▲▼** to select “AUTO SET,” then **press ▶**.

- After Channel Auto Set is finished, Clock Auto Set will be performed.

■ Clock

1) **Press ▲▼◀▶** to select “CLOCK.”

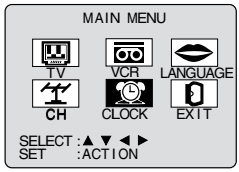

2) **Press ACTION.**

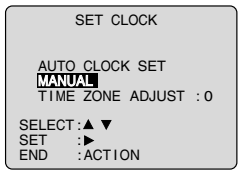

(“TIME ZONE ADJUST” appears only when auto clock is set.)

3) **Press ▲▼** to select “MANUAL” or “AUTO CLOCK SET” and **press ▶**.

- **For Auto Clock Set, select “AUTO CLOCK SET,” then press CH▲.**

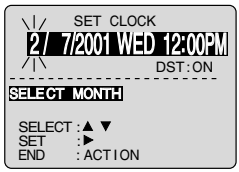

4) **Press ▲▼** and **press ◀▶** to select and set the month, date, year, time, and DST (Daylight Saving Time).

5) **Press ACTION** twice to start the clock and exit this mode.

For assistance, please call : 1-800-211-PANA(7262) or send e-mail to : consumerproducts@panasonic.com

Time Zone Adjust

*__Important:__ if a remote control button does not work when pressed, press the COMBO button on the remote and try the button again.

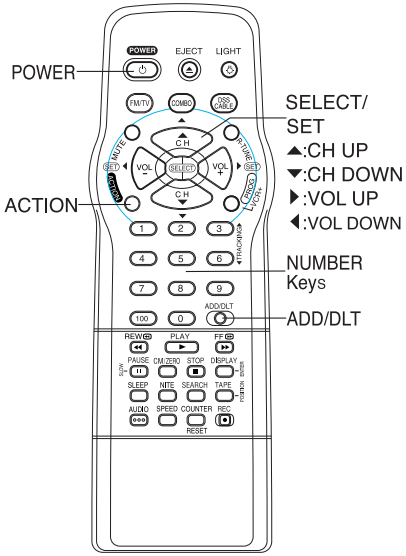

Time Zone Adjust

(Only when Auto Clock is set.)

1) **Press ▲▼◀▶** to select “CLOCK.”

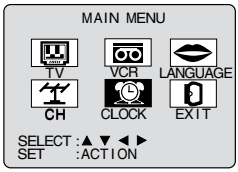

2) **Press ACTION**.

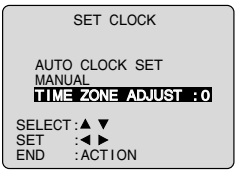

3) **Press ▲▼** to select TIME ZONE ADJUST and **press ◀ or ▶** to subtract or add hour(s) as necessary.

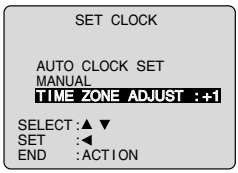

4) **Press ACTION** twice to exit.

- TIME ZONE ADJUST returns to “0” if clock is set manually.

ACTION key on the unit

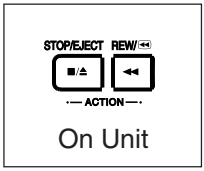

You can operate the menu screen using unit buttons.
To display the menu, press STOP/EJECT and REW together with no tape inserted.
To exit the menu, repeat above with or without tape inserted until normal screen appears.

Using ▲▼◀▶ keys

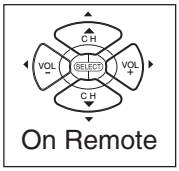

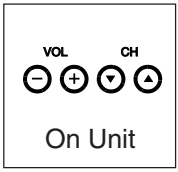

▲ : CH UP
▼ : CH DOWN
▶ : VOLUME UP
◀ : VOLUME DOWN

Whenever the menu or program screen is displayed,CHANNEL UP/DOWN function as ▲▼ and VOLUME UP/DOWN function as ◀▶ only.

Add or Delete a Channel

To add channel:
Select channel with number keys and press ADD/DLT.

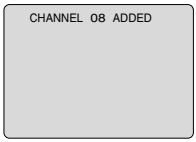

To delete channel:
Select channel with CH ▲▼ or number keys and press ADD/DLT.

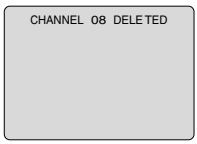

Playback a Tape

Ready Check List

☐ All connections are made.
☐ Your unit is plugged in.

1 **Insert a cassette.**

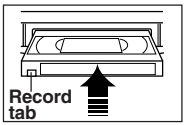

• The unit power comes on automatically.



To prevent tape jam, remove loose or peeling labels from tapes.

2 **Press PLAY.**
• Playback begins if cassette has no record tab.

■ **Forward/Reverse scene search**
→ **Press FF** or **REW**
→ **Press** again or **PLAY** to release.

■ **Still (Freeze) picture**
→ **Press PAUSE/SLOW**
→ **Press PLAY** to release.

■ **Slow Motion picture**
→ **Hold down PAUSE/SLOW** in Still mode
→ **Press PLAY** to release.

■ **Frame by Frame picture**
→ **Press PAUSE/SLOW** in Still mode
→ **Press PLAY** to release.

Notes

• These features work best in SP or SLP mode.
• After the unit is in Still or Slow mode for 3 minutes, it will switch to Stop mode automatically to protect the tape and the video head.

■ **Stop → Press STOP**
■ **Rewind tape → Press REW** in Stop mode
■ **Fast forward tape → Press FF** in Stop mode
■ **Eject tape → Press EJECT** on the remote or STOP/EJECT on the unit

You can operate on the unit
<Model PV-C2061 unit shown>

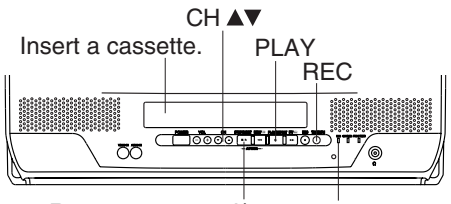

Record On a Tape

1 **Insert a cassette with record tab.**
• The unit power comes on automatically.

2 **Press CH ▲▼*** or number keys to Select Channel.
• For "LINE" input, see bottom of next page.

3 **Press SPEED** to select recording speed (see page 42).
SP = Standard Play
LP = Long Play
SLP = Super Long Play
• Selected speed is displayed.

4 **Press REC** to start recording.
• To edit out unwanted portions, **press PAUSE/SLOW** to pause and resume recording.
• You cannot view another channel during recording.

■ **Stop → Press STOP**
■ **One Touch Recording (OTR)**
Press REC repeatedly to set the recording length (30 min - 4 hours.)



• The unit stops recording at a preset time.
• PROG TIMER indicator lights on the unit.

Notes

• After the unit has been in Rec Pause mode for 5 minutes, it will stop automatically to protect the tape and the video head.
• The remaining recording time of an OTR can be displayed by pressing DISPLAY.

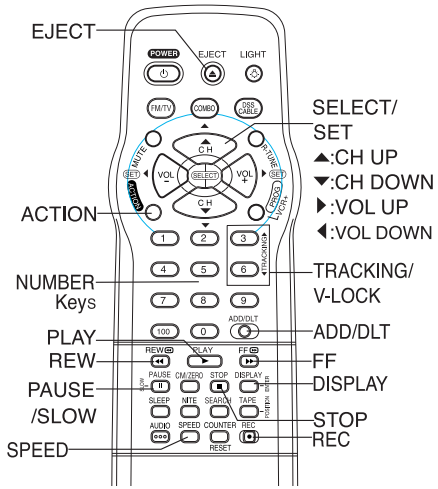

For assistance, please call : 1-800-211-PANA(7262) or send e-mail to : consumerproducts@panasonic.com

Copy Your Tapes (Dubbing)

*Important: if a remote control button does not work when pressed, press the COMBO button on the remote and try the button again.

Connections you'll need to make.

<Model PV-C2061 unit shown>

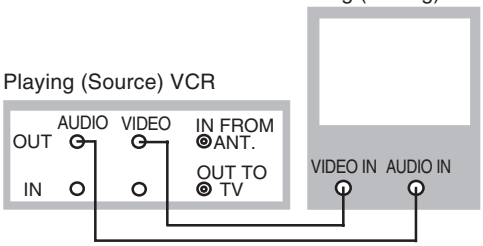

<Model PV-C2081 unit shown>

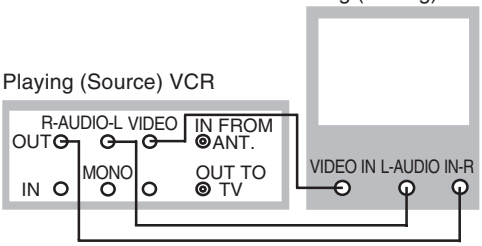

Playback (Source)

1 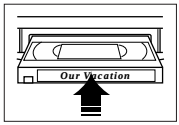

Insert pre-recorded tape.

2 _____

3

Press PLAY then **PAUSE** at starting point to put in Standby mode.

4 

Press PLAY to start dubbing.

5 

Press STOP to stop dubbing.

Recording (Editing) unit

1 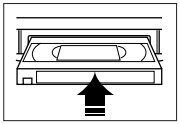

Insert blank tape with record tab.

- Dubbing tapes protected with Copy Guard will have poor quality results.

2 _____

Select "LINE" mode.
See "Selecting Input Mode" below.

3 

Press REC, then **PAUSE/SLOW** immediately to put in Standby mode.

(Perform operation of steps 4 and 5 on both units at same time.)

4 

Press PAUSE/SLOW to start dubbing.

5 

Press STOP to stop dubbing.

Selecting Input Mode

Method 1:
Press CH ▲▼. The display will change as follows.



Method 2:
a Press ACTION for MAIN MENU.
b Press ▲▼◀▶ to select "TV", then **press ACTION** for SET UP TV screen.
c Press ▲▼ to select "INPUT SELECT," and then press ▶ to select "TUNER" or "LINE."
d Press ACTION twice to exit this mode.

Caution

- Unauthorized exchanging and/or copying of copyrighted recordings may be copyright infringement.

Basic Operation

TV Operation

*Important: if a remote control button does not work when pressed, press the COMBO button on the remote and try the button again.

1 **Press POWER* on the remote or unit.**

2 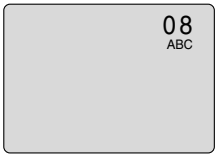

Use CH ▲▼ or number keys to select a channel.

3

Press VOL + or VOL - to adjust volume.

NIGHT (NITE) Mode

Color and picture intensity levels are adjusted so the screen is easier on your eyes during night time use.

Press NITE to set NIGHT mode.
- NIGHT mode may be selected when watching TV, playing a tape, or while in FM mode.

Press NITE to cancel.
- Previous settings are restored.
- NIGHT mode is canceled when power is turned off or power failure occurs.

Ready Check List

☐ All connections are made.
☐ Your unit is plugged in.

<Model PV-C2061 unit shown>

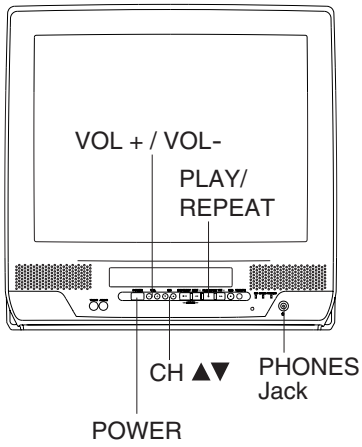

■ Using the 100 key

When selecting CABLE channels 100 to 125 with the number keys, first press the 100 key, and then enter the remaining two digits.

■ Rapid Tune

Press R-TUNE to display the last channel you were watching.

■ Audio Mute

Press MUTE to instantly mute the sound. Press again to restore the previous sound level.

■ Phones

Connect an earphone (not supplied) or headphones (not supplied) to the Phones Jack.

For assistance, please call : 1-800-211-PANA(7262) or send e-mail to : consumerproducts@panasonic.com

MTS Broadcast/TV Stereo System

Equipped with dbx® -TV Noise Reduction for true MTS reproduction. dbx® -TV Noise Reduction is required for good stereo separation and audio fidelity. dbx® is a registered trademark, and is licensed by dbx® Technology Licensing.

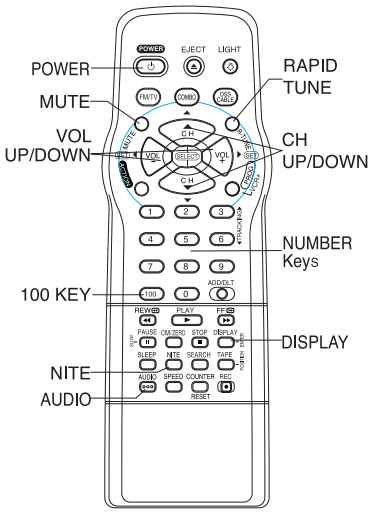

Receivable Broadcast Types

The following are possible audio broadcast types and on-screen displays. The signal being received is indicated with an " ((" mark while the selected audio mode is indicated with an arrow. To change the audio mode for these broadcasts, see the "Select Audio Mode for TV Viewing" section (below.)

Press DISPLAY to display
the broadcast signal being received.

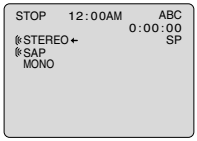

MTS Stereo and SAP broadcast
Multi-channel Television Sound Stereo (main language) and Secondary Audio Program (sub language) broadcasts are being received simultaneously.
Select the STEREO or SAP audio mode.

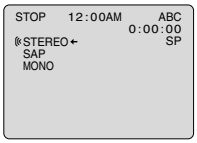

MTS Stereo broadcast
Multi-channel Television Sound Stereo broadcast. Select STEREO audio mode.
- If stereo broadcast is weak and the display flickers, select MONO audio mode for possibly better results.

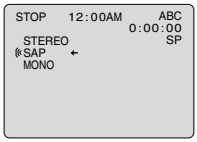

SAP broadcast
Secondary Audio Program (sub language).
Select SAP audio mode for the sub language.

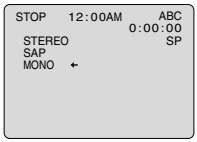

MONO broadcast
Normal monaural sound broadcast.

IMPORTANT NOTE:
<Model PV-C2061 only>
This stereo system is designed for TV viewing only. Recording and playback will always be in monaural.

Select Audio Mode for TV Viewing

Press AUDIO to select the desired audio mode as described above.
(Arrow shows selection.)
- Each press of AUDIO will change the audio mode as shown below.
- "SAP" is selected with first press of AUDIO.

< Example >

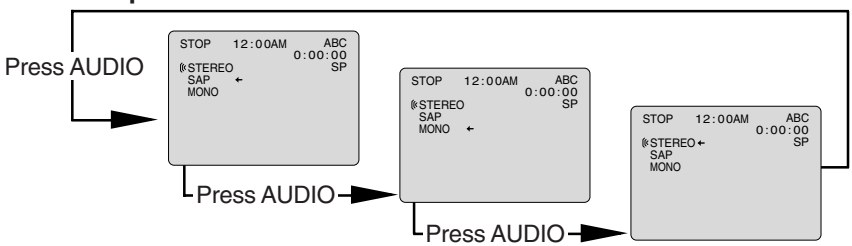

TV Timer Features

ON-TIMER with Alarm

This unit can be set to automatically power on in one of 3 modes (TV, Playback, or FM radio.)
You can also combine the On-Timer with a one minute alarm that gradually increases in volume.

Ready Check List

☐ The clock is set to correct time.

1 **Press PROG/VCR+***
to display SET PROGRAM screen.

2

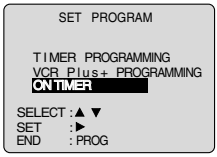

1) **Press ▲▼** to select "ON TIMER."
2) **Press ▶** to display ON TIMER screen.

3

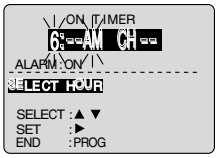

1) **Press ▲▼** to select desired settings.
2) **Press ▶** to set the ON-TIMER TIME or ON-TIMER mode.

- Make sure a tape is inserted if Playback mode is selected.
- See "FM Radio" on page 22 for instructions on how to preset FM stations.

• ON-TIMER mode selection order



4

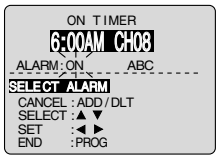

Press ▲▼ to select ALARM "ON" or "OFF."

When "ON" is selected,
an alarm will gradually increase in volume for one minute or until canceled by pressing any button (including VOL + -).

To Make Corrections,
use ▲▼ and ◀▶ to move back and correct.

5 **Press PROG/VCR+**
to set ON TIMER.
- "ON TIMER SET" is displayed.
- ON TIMER Indicator lights on the unit.

To Cancel ON-TIMER set,
Repeat steps **1** and **2**. Then, press ADD/DLT to clear the time in step **3**. Now, press PROG/VCR+ to end. "ON TIMER END" briefly appears on-screen.

<Model PV-C2061 unit shown>

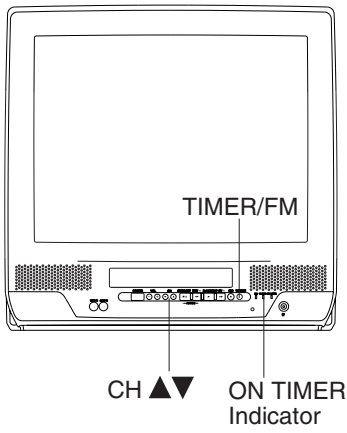

Note

If no button on the remote or unit (including a button used to turn off the alarm) is pressed within 60 minutes after unit turns itself on, it will turn itself back off.

For assistance, please call : 1-800-211-PANA(7262) or send e-mail to : consumerproducts@panasonic.com

*Important: if a remote control button does not work when pressed, press the COMBO button on the remote and try the button again.

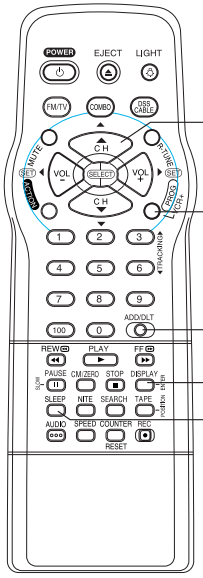

SLEEP TIMER

This unit can be set for auto power off.

Press SLEEP repeatedly to set SLEEP TIMER.

- **Pressing DISPLAY** with sleep timer set displays remaining time.

Press SLEEP repeatedly until "SLEEP TIMER 00" appears to cancel.

SLEEP TIMER 30 → SLEEP TIMER 60 → SLEEP TIMER 90 → SLEEP TIMER 00

INSTANT ALARM

You can set a timer alarm up to 60 min. Useful when you are cooking, etc.

1 **Press TIMER/FM** on the unit to display the instant alarm CANCEL/SET screen.

2 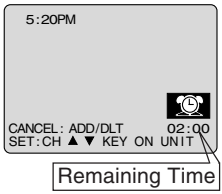

Press CH ▲▼ on the unit with CANCEL/SET screen displayed to set alarm. (Time changes in the order shown left.)

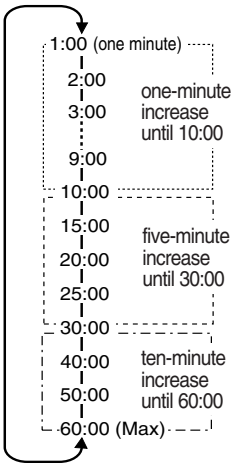

- **Pressing TIMER/FM repeatedly on the unit will change display as follows.**



To cancel, press TIMER/FM then press ADD/DLT on the remote while CANCEL/SET screen is displayed.

To increase timer in progress, repeat step 2. Time will be rounded up to next 1, 5, or 10 minute interval. (See chart left.)

<Example>
- If current time remaining is 12:15, countdown will restart from 15:00.
- If current time remaining is 9:15, countdown will restart from 10:00.

3 **Alarm will sound at 0: 00.**
Press any button to stop
- The volume of the alarm gradually increases for one minute and then continues to beep until any button is pressed.

Note

While timer function is in progress, you can change channels on the unit with CH ▲▼ while "CANCEL/SET" screen is not displayed.

Closed Caption System

Closed Caption is ...

This multi-use system not only allows the hearing impaired to enjoy selected programs, but also makes useful information from TV stations available to everyone.

Closed Caption Mode Feature

1 **Press ACTION*** to display MAIN MENU.

2

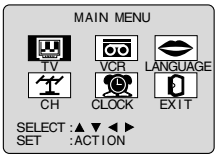

1) **Press ▲▼◄►** to select "TV."
2) **Press ACTION** to display SET UP TV screen.

3

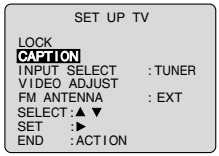

<Model PV-C2061 screen shown.>

1) **Press ▲▼** to select "CAPTION".
2) **Press ►** to display CAPTION screen.

4

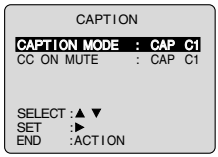

1) **Press ▲▼** to select CAPTION MODE.
2) **Press ►** repeatedly to select mode. (See left.)

5 **Press ACTION** three times to return to the normal screen.

Recording and Playing Back a Closed Caption/Text Program

Record : Record normally. Closed Caption/ Text signal, if present, is recorded automatically.

Playback : Start playback. Do above steps to select desired caption mode.

Caption On Mute Feature

Closed Caption narration, if available, is displayed when MUTE button is pressed for silence.

1 **Press ACTION** to display MAIN MENU.

2

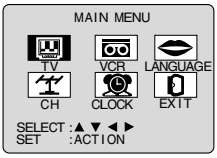

1) **Press ▲▼◄►** to select "TV."
2) **Press ACTION** to display SET UP TV screen.

3

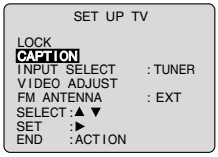

<Model PV-C2061 screen shown.>

1) **Press ▲▼** to select "CAPTION".
2) **Press ►** to display CAPTION screen.

4

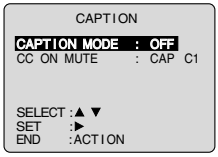

1) **Press ▲▼** to select CAPTION MODE.
2) **Press ►** repeatedly to select "OFF."

5

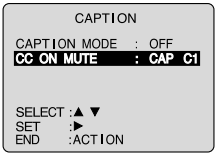

1) **Press ▲▼** to select CC ON MUTE.
2) **Press ►** repeatedly to select desired mode.

- Each press of ► will change the display as shown left.
- The caption may be broadcast over CAP C1 or C2.

6 **Press ACTION** three times to return to the normal screen.

7 **Press MUTE** to mute the sound and display closed captioning.
- To cancel, press MUTE again.

Closed Caption Mode Selections

Caption Mode: CAP C1 or C2

A narration of selected TV programs is displayed.
Check TV program listings for CC(Closed Caption) broadcasts.

Caption Mode: TEXT C1 or C2

The lower half of the screen will be blocked out. When the TV station broadcasts information, such as program listings, it will appear in this space.

Caption Mode: OFF

Closed Caption /Text narration will not be displayed.

NOTE : The closed caption or text signal may be broadcast over C1, C2, or both. Also, text contents can vary so you may wish to try different settings.

For assistance, please call : 1-800-211-PANA(7262) or send e-mail to : consumerproducts@panasonic.com

Picture Adjustment

*Important: if a remote control button does not work when pressed, press the COMBO button on the remote and try the button again.

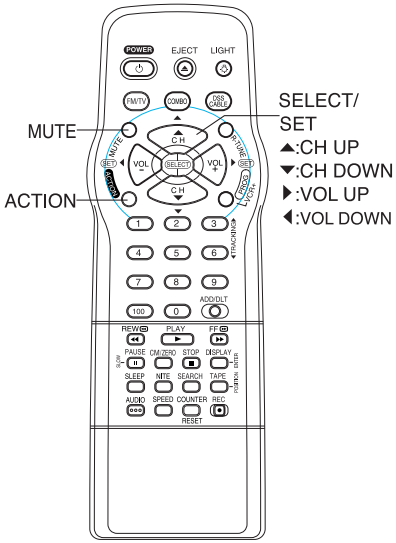

Picture Adjustment

- **COLOR Control**
  Adjust color intensity.
- **TINT Control**
  Adjust for natural flesh tones.
- **BRIGHTNESS Control**
  Adjust picture brightness.
- **PICTURE Control**
  Adjust picture intensity by adjusting both contrast and color level in the proper balance.
- **SHARPNESS Control**
  Adjust picture sharpness.

1 **Press ACTION** to display MAIN MENU.

2

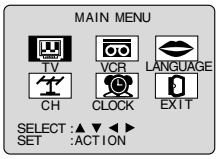

1) **Press ▲▼◀▶** to select “TV.”
2) **Press ACTION** to display SET UP TV screen.

3

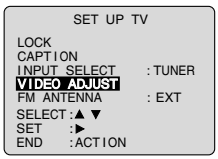

<Model PV-C2061 screen shown.>

1) **Press ▲▼** to select VIDEO ADJUST.
2) **Press ▶** to display screen.

4

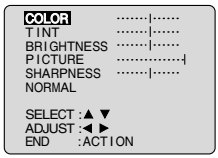

1) **Press ▲▼** to select an adjustment item. (See below left.)
2) **Press ◀▶** to adjust.

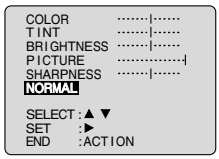

To Reset Picture Controls.
Press ▲▼ and **▶** to select and set “NORMAL.”
All controls return to their factory settings.

5 **Press ACTION** three times to exit.

TV Operation

FM Radio

FM Radio is ...
This unit has an FM radio with built-in antenna, 9 station preset, and a band range of 87.5 ~ 108.1 MHz. You can even set the On-Timer (page 18) to wake up to your favorite radio station.

FM Radio Setup

1 **Press FM/TV*** on the remote or **press TIMER/FM** twice on the unit to display FM radio mode.

2

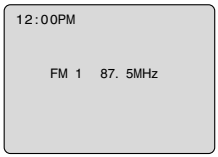

Press a number key (1~9) to select the FM preset number.

3

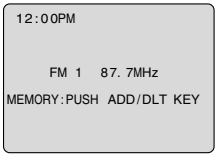

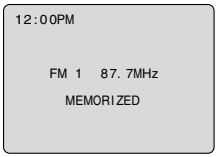

1) **Press CH ▲▼** to select the desired radio station. (Each press changes frequency 200 KHz.)
2) **Press ADD/DLT** to set the radio station.

Hold down CH ▲ or ▼ for a few seconds, then release to quickly scan for FM stations in your area.

- To cancel, press CH ▲ or ▼ while in search mode.

To Make Corrections, select station with a number key, then do step **3** again.

To exit FM mode, press FM/TV on the remote or TIMER/FM twice on the unit.

FM ANTENNA Setup

Make sure FM tuning is done correctly (see FM Radio Setup).

1 **Press ACTION** to display MAIN MENU.

2

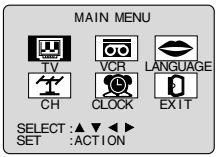

1) **Press ▲▼◄►** to select "TV."
2) **Press ACTION** to display SET UP TV screen.

3 **<step 3,4 PV-C2081 only>**

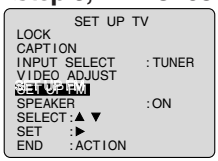

1) **Press ▲▼** to select SET UP FM.
2) **Press ▶** to display screen.

4



<Model PV-C2081 screen shown.>



<Model PV-C2061 screen shown.>

1) **Press ▲▼** to select FM ANTENNA.
2) **Press ▶** to select "INT (INTERNAL)" or "EXT (EXTERNAL)" whichever sounds the best.

■ **For cable TV users** → **"INT"**
■ **For antenna users** → **"EXT"**

5 **Press ACTION** twice (PV-C2061), or three times (PV-C2081) to end setup.

Using FM Radio

1 **Press FM/TV** on the remote or **press TIMER/FM** twice on the unit to display FM radio mode.

2

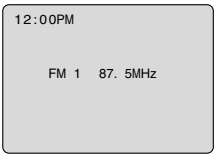

Press a number key (1~9) to select a preset FM number (see steps **2** and **3** on this page).

To cancel, press FM/TV on the remote or TIMER/FM twice on the unit.

To select Audio Mode for FM Radio

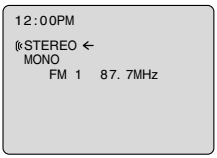

Press AUDIO repeatedly to select "STEREO" or "MONO" in FM Radio mode.

Notes

- FM radio cannot be recorded on a Video cassette.
- You may get better reception by repositioning the unit.
- You cannot select FM Radio mode during playback or record, or while a blue back screen (PROG/VCR+, ACTION, MENU) is displayed.
- Once stations are set, the selected station and current time are displayed when FM Radio mode is entered. To remove time, press DISPLAY. If DISPLAY is pressed again, the unit status screen appears.

For assistance, please call : 1-800-211-PANA(7262) or send e-mail to : consumerproducts@panasonic.com

FM Transmitter

*Important: if a remote control button does not work when pressed, press the COMBO button on the remote and try the button again.

<For Model PV-C2081 only>

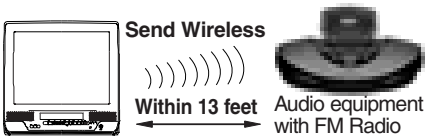

Carrier Frequency : 93 ~ 97, 99 ~ 103 MHz

FM Transmitter is ...
This unit's sound can be heard on an FM Radio. First, tune your radio to a vacant (no broadcast) station between 93 ~ 97 or 99 ~ 103 MHz. Then, set the combo to the same station. Now, fine-tune this unit so the sound comes in clearly.

FM Transmitter Carrier Frequency Setup

1 **Press ACTION** to display MAIN MENU.

2

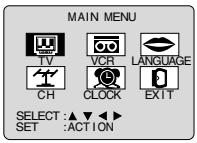

1) **Press ▲▼◀▶** to select "TV."
2) **Press ACTION** to display SET UP TV screen.

3

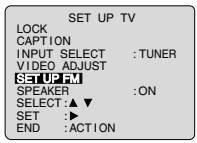

1) **Press ▲▼** to select SET UP FM.
2) **Press ▶** to display screen.

4

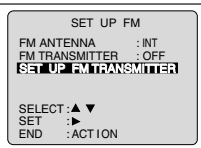

1) **Press ▲▼** to select SET UP FM TRANSMITTER.
2) **Press ▶** to display screen.

• When step **4** is done, if FM TRANSMITTER is "OFF," the unit is automatically set to "MONO."

5

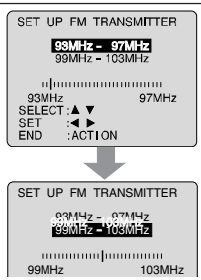

1) **Press ▲▼** to select the desired frequency range. (93-97 or 99-103 MHz)
2) **Press ◀▶** to select the Carrier Frequency.
3) **Press ACTION** to set the Carrier Frequency. (The screen in step **4** is redisplayed.)

To Make Corrections,
select frequency with CH **▲▼◀▶**, then repeat step **5**.

6 **Press ACTION** four times to end setup

FM Transmitter Control

Set to "STEREO" if you wish to listen in stereo.

1 **Do "FM Transmitter Carrier Frequency Setup" steps 1~3 at left.**

2

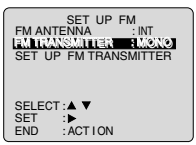

1) **Press ▲▼** to select FM TRANSMITTER.
2) **Press ▶** to select "OFF", "MONO", or "STEREO."

• If the sound becomes noisy, change the unit setting from STEREO to MONO or the FM Radio from stereo to monaural.

3 **Press ACTION** three times to end setup

Notes

- The Carrier Frequency shown by the selector bar is a guide only. Please listen to the sound and adjust accordingly.
- The unit will transmit sound when unit power is on and "FM TRANSMITTER : MONO or STEREO" is selected.
- When unit power is turned off, "FM TRANSMITTER" returns to "OFF" setting.
- Please place your FM Radio within 13 feet of the unit.
- Interference occurs when you select CATV channels 95, 96, or 97, while FM Transmitter is operating.
- FM Transmitter will not work in FM Radio Mode.
- Depending on the positioning or type of FM Receiver, the sound signal may become noisy. In this case, change the FM Receiver from Stereo to Monaural.
- Please note the current FM Transmitter capability is the maximum level allowed by FCC standard for low power license-exempt radio communication devices.

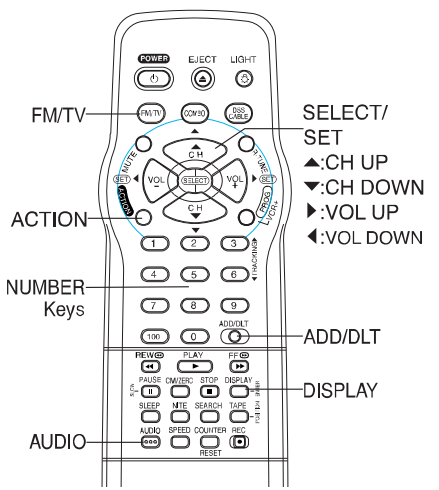

TV Operation

Timer Recording

You can set up to 8 programs to be recorded while you are away.

Ready Check List

- ☐ All connections are made.
- ☐ Your unit is plugged in.
- ☐ The clock is set to correct time.
- ☐ The tape is long enough.
- ☐ The record tab is in place.

<Model PV-C2061 unit shown>

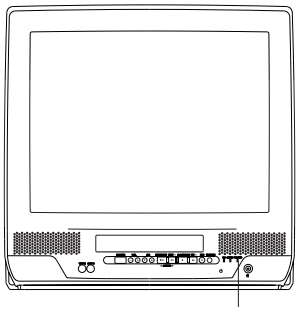

PROG TIMER Indicator

1 **Press PROG/VCR+*** to display SET PROGRAM screen.

2

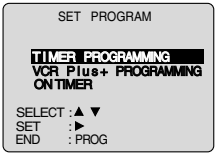

1) **Press ▲▼** to select TIMER PROGRAMMING.
2) **Press ▶** to display screen.

- If a program is already in memory, press ▲▼, and ▶ to select an unused program number.

3

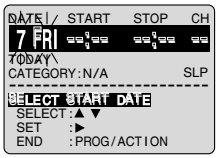

Press ▲▼ to select and ▶ or ◀ to set the recording DATE.

- 1~31 = One time
- DAILY = MON~FRI
- WEEKLY SUN~SAT = Same time once a week

Example

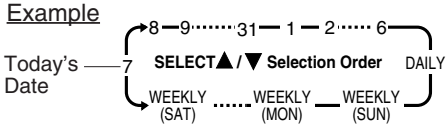

Repeat step 3 to set:

- start time, stop time
- Channel (or LINE for outside source)
- Category [N/A (not applicable), SPORTS, MOVIE, COMEDY, MUSIC, DRAMA]
- Speed (SP, LP, SLP)

4

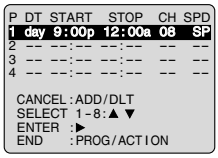

Press PROG/VCR+ (or **ACTION**) to end the program.

To Enter More Programs
Press ▲▼ to select and ▶ to set a blank program number, and then repeat step **3**.

5 **Press PROG/VCR+** twice (or **ACTION**) to exit this mode.

- If you're using a cable box, make sure that it is tuned to the desired channel and the power is left on for timer recording.
- PROG TIMER indicator lights on the unit.

Timer Recording Using unit Buttons

You can set a Timer Recording using ACTION key on the unit. (See page 13.)

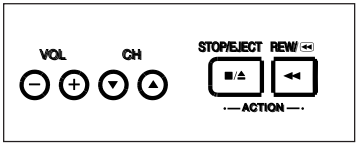

1. Press STOP/EJECT and REW together without a tape inserted to display MAIN MENU.
2. Press ▲▼ + - to select "VCR" and STOP/EJECT and REW together to display SET UP VCR screen.
3. Press ▲▼ to select "TIMER PROGRAM" and + to display the TIMER PROGRAM screen.
4. Repeat main steps **3** ~ **5**.

For assistance, please call : 1-800-211-PANA(7262) or send e-mail to : consumerproducts@panasonic.com

Cancel a Timer Recording: (Recording is in progress)

Hold down STOP for a few seconds to cancel the Timer Recording.

- Any future daily or weekly recordings will be performed as programmed.

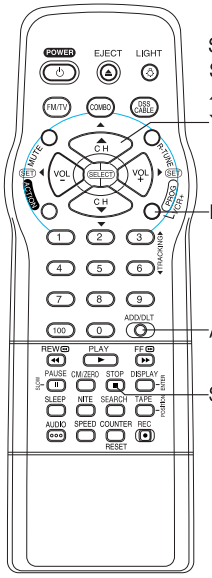

Review, Replace or Clear Program Contents : (Recording is not in progress)

1 **Repeat steps 1 and 2 on page 24.**

2

```
P DT START  STOP  CH SPD
1 SA  8:00p12:00a 08  SP
2  8 10:00a12:00p125  SP
3 10  8:00p 9:00p 10  SP
4 SU  9:00p10:00p  L  LP

 CANCEL:ADD/DLT
 SELECT 1-8:▲▼
 ENTER  :▶
 END    :PROG/ACTION
```

Press ▲▼ to select the desired program.

3 **To Replace program...**

```
DATE  / START   STOP   CH
 8 SAT 9:00P 12:00A  08
 TODAY                ABC
CATEGORY:MOVIE        SP
-----------------------------
SELECT START DATE
 SELECT:▲▼
 SET   :◀▶
 END   :PROG/ACTION
```

1) **Press ▶** to display.
2) **Press ▲▼** to select and **press ◀** or **▶** to set new program contents.
3) **Press PROG/VCR+** (or **ACTION**).

To Clear program...

```
P DT START  STOP  CH SPD
1 -- --:-- --:--  --  --
2  8 10:00p12:00a125  SP
3 10  8:00p 9:00p 10  SP
4 SU  9:00p10:00p  L  LP

 SELECT 1-8:▲▼
 ENTER  :▶
 END    :PROG/ACTION
```

Press ADD/DLT.

4 **Press PROG/VCR+** twice (or **ACTION**) to exit this mode.

Notes

- 2 minutes before Timer recording is performed, “PLEASE PREPARE FOR TIMER REC” appears and/or the PROG TIMER Indicator flashes. Be sure a cassette with record tab is loaded and the unit is in Stop mode.
- If the start times of two programs overlap, the lower numbered program will have priority.
- If the start time for a Timer Recording comes up during a normal recording or One Touch Recording (page 14), the Timer Recording will not be performed.
- If there is a power interruption of more than one minute, the recording may not be performed or continued.
- If “INCOMPLETE” appears after all items have been set, check all entries and make necessary corrections.

Timer Programming using VCR Plus+® System

VCR Plus+ System is...

This feature allows you to set most items of a Timer Recording by simply entering a special code number (PlusCode) found in TV GUIDE and selected newspaper TV listings.

Initial Setup...
In order to do Timer Programming using VCR Plus+, the Initial Setup (Clock and Channels) on page 8 to 13 must be done.

Channel Setup...
Since PlusCode numbers assigned to channels (found in TV Guide and selected newspapers) may differ from channels in your viewing area, you'll need to enter your local TV channel number for each corresponding Guide Channel. Once Channel Setup is done, the correct local channel will be selected when PlusCodes are used to program this unit.

Channel Setup Preparations

To complete step 4 right, make a local channel list (see example below).

You will need the following:

- A normal TV and/or Cable station line up and the channel numbers your receive them on.
- A list of Guide (VCR Plus+) channel numbers for stations you receive (see TV Guide and selected newspapers.)

1 Make a 3-column chart. In the left column, write all station names you receive.

2 In the middle column, write each station's Guide (VCR Plus+) number (see TV Guide, etc.).

3 In the right column, write the channel number your TV receives the station on.

< EXAMPLE ONLY >

Broadcast or Cable Station Name	Assigned Guide (VCR Plus+) Channel no.	Channel no. your TV receives the station on
HBO	33	15
Nickelodeon	38	20
CBS	34	04
FOX	11	

VCR Plus+ Channel Setup

[For DSS / Cable Box connection only.]

At first, do Channel Setup Preparations left.

1 **Press ACTION*** to display MAIN MENU.

2

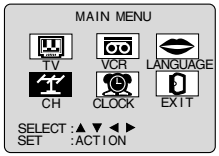

1) **Press ▲▼◄►** to select "CH."
2) **Press ACTION** to display SET UP CHANNEL screen.

3

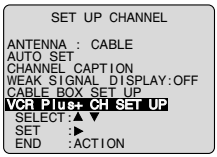

1) **Press ▲▼** to select VCR Plus+ CH SET UP.
2) **Press ▶** to display screen.

4

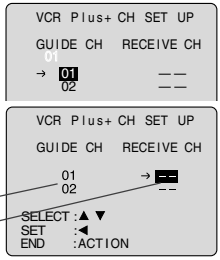

1) **Press ▲▼** to scroll up/down the GUIDE CH column.
2) **Press ▶** to move cursor to right column.
3) **Press ▲▼** to change the CABLE CH number.
4) **Press ◀** to set VCR Plus+ channels.
- Repeat step **4** until list is complete.

To Make Corrections
Press ▲▼ and ▶ to move to error, then ▲▼ to change, or ADD/DLT to erase number.

5 **Press ACTION** three times to end the setup.

For assistance, please call : 1-800-211-PANA(7262) or send e-mail to : consumerproducts@panasonic.com

*Important: if a remote control button does not work when pressed, press the COMBO button on the remote and try the button again.

Ready Check List

- ☐ The clock is set to correct time.
- ☐ VCR Plus+ System Setup is complete. (See page 26.)

Use normal Timer Recording steps if:

- a program PlusCode programming number is not listed.
- program, such as a sporting event, may run over scheduled stop time.

See page 25 to:

- cancel a timer recording in progress.
- replace program contents.
- review or clear program contents once set.

Notes

- You can obtain unlisted PlusCode programming numbers by calling 1-900-454-7587. Call costs approximately $.95 per minute.
- Avoid overlapping program times.
- If you're using a cable box, make sure that it is tuned to the desired channel and the power is left on for timer recording.
- Timer programs memory capacity is 8. To add more programs, please first clear other programs. (See page 25.)
- Make each entry within 5 minutes or the unit will leave this mode.
- Once local channels have been programmed, they will stay in memory, even in the case of a power failure.

VCR Plus+ and PlusCode are registered trademarks of Gemstar Development Corporation.
The VCR Plus+ system is manufactured under license from Gemstar Development Corporation.

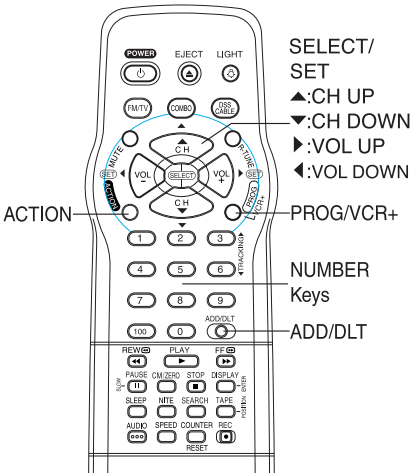

VCR Plus+ System Programming

1 **Press PROG/VCR+** to display SET PROGRAM screen.

2

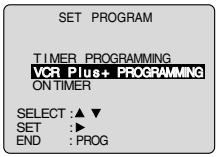

1) Press ▲▼ to select VCR Plus+ PROGRAMMING.
2) Press ▶ to display screen.

3

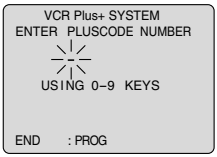

1) **Press number keys** to enter PlusCode programming number.
2) **Press PROG/VCR+** when finished.

To Make Corrections
Press ◀ repeatedly to delete the PlusCode programming number.

4

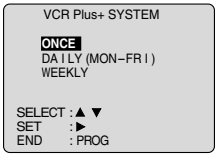

1) **Press** ▲▼ to select and ▶ to set Record Frequency.

5

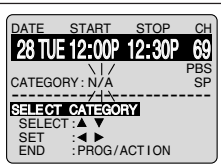

1) **Press** ▲▼ to select and ▶ to set Category and Record speed.

Selections:

- Categories → N/A (not applicable), SPORTS, MOVIE, COMEDY, MUSIC, or DRAMA
- Speed → SP, LP, or SLP

To Make Corrections
Press ◀▶ to move the cursor and ▲▼ to make the correction.

6

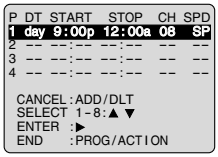

Press PROG/VCR+ (or **ACTION**.) to end programming.

7 **Press PROG/VCR+** twice (or **ACTION**) to exit this mode.

- PROG TIMER indicator lights on the unit.

Cable Box Universal Remote Control Feature

Universal Remote Control is...

The Remote Control may be set up to control some basic DSS or Cable box functions.

The Universal Remote Control Setup

1 Find your DSS box or Cable box Brand Code Number from one of the charts on the next page.

2 Setup remote.

Hold down DSS CABLE and **press number keys** to enter code.

- For code 100 or greater, first press 100 key, then the remaining digits. E.g. for 102, press 100, then press 0, and then press 2.

3 Confirm code entry.

Press POWER* to turn selected unit ON or OFF.

- See below for controllable functions in each mode.

Notes

- Please repeat the Universal Remote Control Setup after replacing remote control batteries.
- The remote control will not operate all DSS receivers or Cable Boxes made by the manufactures listed. If you get no results, your particular brand cannot be controlled.

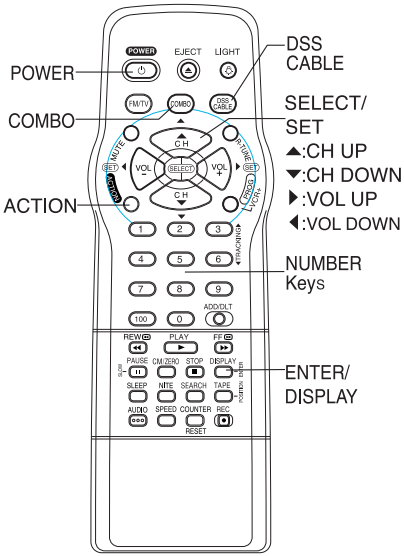

Using the Universal Remote Control

Once the remote control has been properly set up, you can select COMBO, DSS or CABLE mode depending on which functions you wish to control. (See below.)

Press COMBO or DSS CABLE on the remote control to select the desired mode. (See below for buttons available in each mode.)

Set to COMBO:

- All TV and VCR functions.

Set to DSS CABLE:

- Basic VCR functions, e.g. PLAY, REC, etc.
- CABLE/DSS functions, e.g. POWER, ENTER, number keys (except 100 key), CH UP/DOWN.

For assistance, please call : 1-800-211-PANA(7262) or send e-mail to : consumerproducts@panasonic.com

*Important: if a remote control button does not work when pressed, press the COMBO button on the remote and try the button again.

DSS Brand Code Numbers

Toshiba 92
Hitachi/Hughes 93
Magnavox/Uniden 1 94
Magnavox/Uniden 2 95
Panasonic 96
RCA 97
Sony 98, 105

Cable Box Brand Code Numbers

Archer 05, 06, 01, 44, 63, 91, 126
Cabletenna 01, 44, 63, 91, 126
Cableview 63, 44, 42, 30, 52, 04, 124, 126
Century ... 51, 44, 59, 75, 126
Citizen 63, 44, 42, 30, 52, 04, 124, 126
Curtis 08, 09, 61, 53, 87
Diamond . 01, 44, 63, 91, 126
Drake 67
Eagle 13, 22, 58, 62, 20, 40, 26, 107
Eastern 28, 130
GC Brand 63, 44, 42, 30, 52, 04,124, 126
Gemini 04, 124
General Electric 57,01
General Instruments 01,02, 03, 04, 34,55, 83, 106, 65, 67, 68, 115, 117, 118
Hamlin 14, 15, 28, 41, 102, 103,104, 108, 130
Hitachi 31
Jasco 04, 124
Jerrold 01, 02, 03, 04, 34, 55, 83, 106, 65, 67, 68, 115, 117, 118
Macom 31
Magnavox 26, 112
Matsushita 16, 17, 97, 109
Movietime 32, 39, 42, 44, 126, 38, 40
NEC 38, 40, 32
NOVAVISION 08, 09, 61, 53, 87
NSC 38, 40, 32
Oak 46, 11, 129
Oak Sigma 46, 11, 129
Panasonic 16, 17, 97, 109
Philips 07, 13, 20, 23, 24, 50, 128, 129
Pioneer 05, 06
Pulsar 63, 44, 42, 30, 52, 04, 124, 126
Quest 05, 06
Radio Shack ... 51, 44, 59, 75, 126
RCA 16, 17, 97, 109
Realistic ... 51, 44, 59, 75, 126
Recoton ... 51, 44, 59, 75, 126
Regal 14, 15, 28, 41, 102, 103, 104, 108, 130
Regency 28, 130
Rembrandt 01, 32, 39, 42, 44, 63, 126
Salora 68
Samsung ... 05, 32, 40, 42, 06
Scientific Atlanta 08, 09, 61, 53, 87
Sheritech 27
Signal 26, 112
SL Marx 32, 40, 42, 06, 43, 44, 52, 63, 126
Sprucer 16, 17, 97, 109
Standard Components 32, 39, 42, 44, 126
Stargate 32, 40, 63, 44, 42, 30, 52, 04, 06, 124, 126
Sylvania 19
Teknika 74
Telecaption 77, 127
Teleview 32, 40, 42, 06
Texscan 18, 19
Tocom .. 33, 34, 01, 42, 66, 91
Toshiba 36
Uniden Satellite 65
Unika 01, 44, 63, 91, 126
Universal ... 42, 43, 44, 52, 63, 126
Videoway 07, 23, 50, 129
Vid Tech 64
Vidtek 64
Viewstar 13, 22, 58, 62, 20, 40, 26, 107
Zenith 07, 23, 50, 129

Notes

- In DSS or CABLE mode, it may be necessary to press ENTER after pressing number keys for channel selection.
- In DSS or CABLE mode, POWER, CH Up/Down, number Keys, ACTION, PROG/VCR+, DISPLAY, SEARCH, R-TUNE, FM/TV, or ADD/DLT are not available. Press COMBO to use these functions.
- Depending on your DSS receiver or Cable box brand, some of the functions listed may not be remote controllable.
- Some DSS receiver or Cable box brands require you to turn on the power manually.
- Due to changes in infra-red commands used by manufacturers, some brands have several codes. If your unit does not respond to the first code, please try the next one.

Tape Operation

Search System is ...

Each time a recording is made, an invisible index mark is placed on the tape.
When timer recordings are made, program index and information are also included.
These index marks can be used to access or scan recordings.

Index Search

Go directly to the desired recording.

1 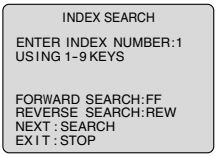

Press SEARCH* in Playback or Stop mode to display INDEX SEARCH screen.

2 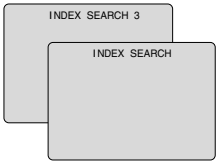

Press number keys to select the recording number.
- To calculate number, see below.

3 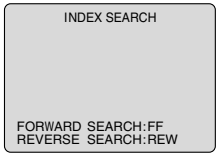

Press FF or REW to start search.
- Play begins at search end. To search forward or back 1 index, **press FF or REW** while screen left in displayed (10 seconds).

■ To calculate the Index Number

Example 1:
To go to rec. 2 from rec. 4, enter 3 and press REW.



Example 2:
To go to rec. 6 from rec. 2, enter 4 and press FF.



NOTE: ↓ indicates start points of each recording.

Notes
- Make each entry within 10 seconds, or the Index Search mode will be canceled.
- If Index Search is started very close to an index mark, that index mark may not be counted in the search.

Program End Search

Locates end point of recording for continuity.

1 **Press SEARCH** twice in Playback or Stop mode to display PROGRAM END SEARCH screen .

2 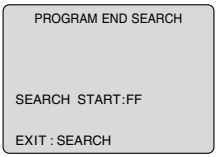

Press FF to start search.

Example of **Program End Search** operation.

Fig.1



Fig.2



Fig.3 If search exceeds a few seconds in BLANK area.



Upon locating end point...
The unit searches slightly past end point, reverse searches, and plays the last few seconds of the program, then stops.

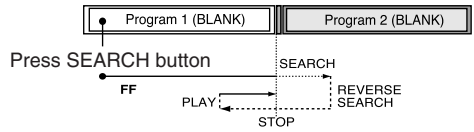

Notes
- If Program End Search is started very close to an index mark, that mark may be skipped over.
- To cancel, press PLAY or STOP.

For assistance, please call : 1-800-211-PANA(7262) or send e-mail to : consumerproducts@panasonic.com

*Important: if a remote control button does not work when pressed, press the COMBO button on the remote and try the button again.

<Model PV-C2061 unit shown>

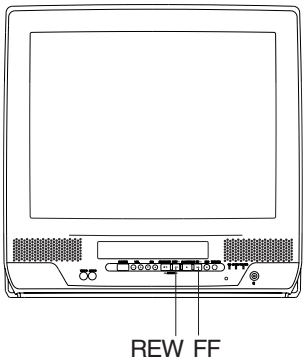

Auto Operation Functions

- **Auto Shut Off**
  No broadcast signal in TV, blank tape is Played for 5 minutes
  → Power turns off
  • This feature is canceled if any button is pressed during above mode.
- **Auto Playback**
  Insert a tape in Power off mode
  → Power turns on
  • Playback begins if tape has no record tab.
- **Auto Rewind**
  Tape reaches its end
  → Rewind, → Stop
- **Playback Auto Eject (Repeat Play is "OFF")**
  Tape with no record tab reaches its end
  → Rewind, → Stop, → Eject

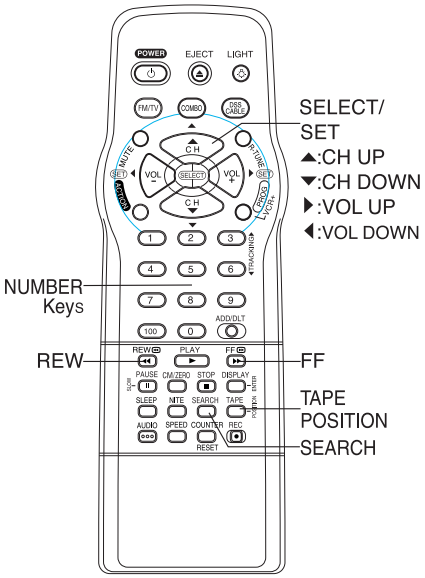

Tape Position Display

To find out present tape position and amount of tape remaining.
Tape position cannot be detected for C-Cassettes, tapes under 30 minutes, and some other tapes.

1 Press TAPE POSITION to detect current tape position.

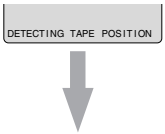

• "DETECTING TAPE POSITION" is displayed only when a cassette is first inserted and it takes several seconds for correct tape position to appear.

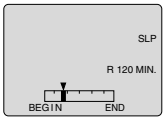

• The present tape position indication and amount of tape remaining (according to tape speed) is displayed.
• Tape remaining time display may not be precise.

2 Press TAPE POSITION (or wait 5 seconds) to return to normal screen.

Note

• This function cannot display exact amount of tape remaining for tapes over 120 minutes.

Tape Operation (continued)

Repeat Play

Set to see a recording over and over.

1 **Press ACTION*** to display MAIN MENU.

2

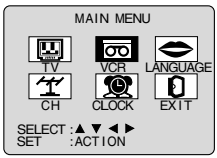

1) **Press ▲▼◄►** to select “VCR.”
2) **Press ACTION** to display SET UP VCR screen.

3

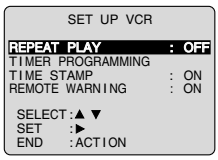

1) **Press ▲▼** to select “REPEAT PLAY.”
2) **Press ▶** to set REPEAT PLAY “ON” or “OFF.”

4 **Press ACTION** twice to end setup.

Zero Search

To quickly return to a specific tape counter location.

1 **Press DISPLAY** during playback to display the Counter.

2

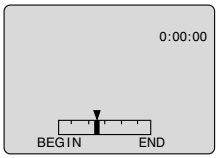

Press COUNTER RESET at the desired position to reset to “0:00:00.”

3 **Continue playback, rewind, or fast forward.**

4 **Press STOP.**

5

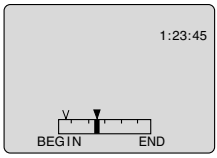

Press CM/ZERO in stop mode to start ZERO SEARCH.

- ▼ : Present position mark
  ⋁ : Zero position mark
- Unit goes into FF or REW mode and stops at the last point the Counter was set to 0:00:00.

Commercial Skip

By pressing the CM/ZERO button in Playback mode you can skip over 1 to 3 minutes of recorded tape in just a few seconds.

1 **Press CM/ZERO** repeatedly to select skip time in Play mode.
- No indication appears.

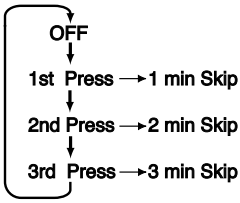

Repeat Play Notes

- Playback repeats when tape end is reached or unrecorded portion over 30 seconds is detected.
- During playback, you may also press PLAY/REPEAT repeatedly on the unit to select REPEAT “ON” or “OFF.”

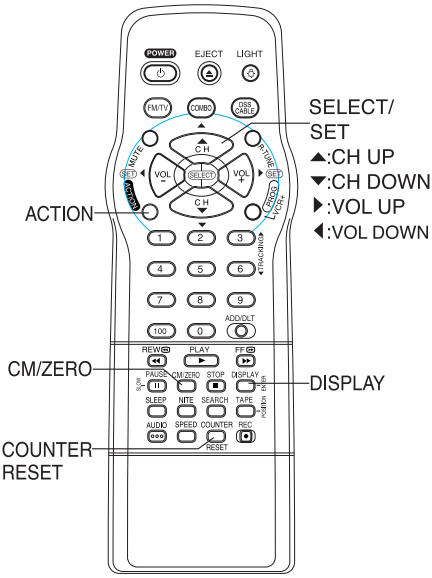

Zero Search Note

- If a blank portion exists on the tape, and depending on the position of the ⋁ mark, the ⋁ mark display may be out of position.

For assistance, please call : 1-800-211-PANA(7262) or send e-mail to : consumerproducts@panasonic.com

Special VCR Features

*Important: if a remote control button does not work when pressed, press the COMBO button on the remote and try the button again.

Remote Warning ON/OFF

When Universal Remote Control (page 28) is used, and this feature is set to "ON," a warning appears whenever an invalid key is pressed in DSS or Cable mode.

1 **Press ACTION** to display MAIN MENU.

2

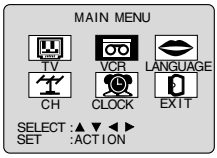

1) **Press ▲▼◄►** to select "VCR."
2) **Press ACTION** to display SET UP VCR screen.

3

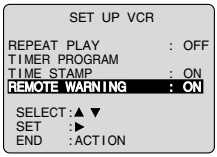

1) **Press ▲▼** to select REMOTE WARNING.
2) **Press ►** to set "ON" or "OFF."

• "REMOTE WARNING : OFF"
➔ Remote warning will not appear even if invalid key is pressed.

4 **Press ACTION twice** to return to normal screen.

<Model PV-C2061 unit shown>

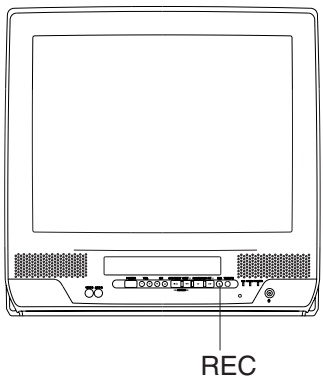

Weak Signal Display ON/OFF

When "ON" is selected, the picture is displayed even when a broadcast signal is weak or non-existent.

1 **Press ACTION** to display MAIN MENU.

2

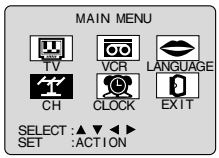

1) **Press ▲▼◄►** to select "CH."
2) **Press ACTION** to display SET UP CHANNEL screen.

3

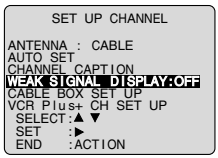

1) **Press ▲▼** to select WEAK SIGNAL DISPLAY.
2) **Press ►** to set "ON" or "OFF."

Notes

• "ON" = Picture is displayed regardless of signal condition, and may not always be clearly visible.
"OFF"= Screen turns solid blue when signal is absent or weak.
• If unit is connected to equipment which has blue back feature, selecting "ON" will have no effect on the other equipment.

4 **Press ACTION twice** to return to the normal screen.

VCR Lock

All operations are prohibited except Timer recording and tape eject. Useful for families with small children.

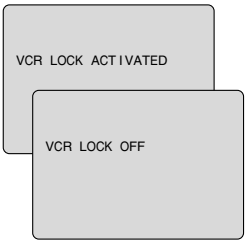

In stop mode, **hold down REC** on the unit without a cassette inserted for 7 seconds to turn "ON." Please ignore "NO CASSETTE" warning.

Repeat above with or without cassette to turn "OFF."

• VCR Lock is canceled automatically after about 24 hours if clock is set.

Preset Caption

1 **Press ACTION*** to display MAIN MENU.

2

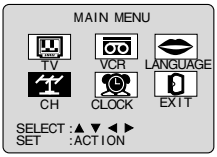

1) **Press ▲▼◄ ►** to select "CH."
2) **Press ACTION** to display SET UP CHANNEL screen.

3

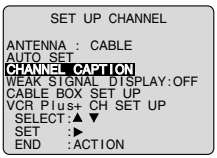

1) **Press ▲▼** to select CHANNEL CAPTION.
2) **Press ►** to display screen.

4

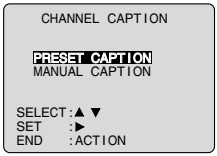

1) **Press ▲▼** to select PRESET CAPTION.
2) **Press ►** to display screen.

• To create your own captions, go to "Manual Caption" on page 35.

5

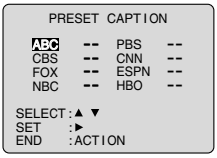

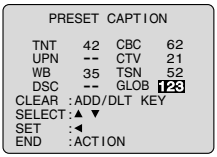

1) **Press ▲▼** to select a station.
2) **Press ►** to move cursor to the right.
3) **Press ▲▼** to select channel number.
4) **Press ◄** to set preset captions.

• Repeat step **5** until the Caption List is complete.

To Make Corrections

Press ▲▼, then ► to select channel number.
Press ▲▼ to change, or ADD/DLT to delete.

6 **Press ACTION** four times to end setup.

Channel Caption is ...

Station names, e.g. ABC, TNN, etc. are set so they will appear when a channel is selected. Choose 24 preset names (Preset Caption), or make up to 10 names of your own (Manual Caption).

☑ Check list before you begin.

☐ You need a list of stations and the channel numbers you receive them on.

For assistance, please call : 1-800-211-PANA(7262) or send e-mail to : consumerproducts@panasonic.com

*Important: if a remote control button does not work when pressed, press the COMBO button on the remote and try the button again.

Manual Caption

1 **Do “Preset Caption” steps 1~3 (page 34).**

2

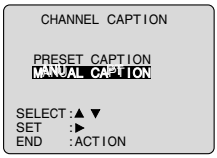

1) **Press ▲▼** to select MANUAL CAPTION.
2) **Press ▶** to display screen.

3

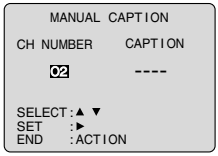

1) **Press ▲▼** to select CH NUMBER.
2) **Press ▶** to move cursor to the right.

- Channels already set and channels deleted from Channel Memory are not displayed.
- You can set a total of ten channel captions with up to four characters each.

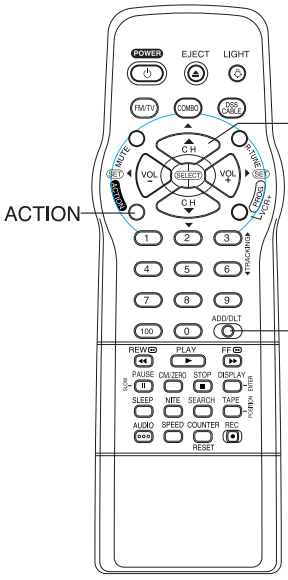

4

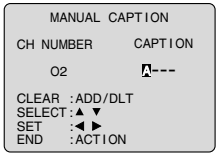

1) **Press ▲▼** to select and **▶** to enter your caption.

- Characters change in the following order.

A— B— C····· Z— BLANK— – —&
9····· 2 —1 —0 —/ —!

- Press **◀** repeatedly to move the cursor to “CH NUMBER.” Repeat steps **3** and **4** as desired.

To Make Corrections

Press ▲▼, then **▶** to select channel number.
Press ▲▼ to change, or ADD/DLT to delete.

5 **Press ACTION** four times to end setup.

Special VCR Features (continued)

Time Stamp Feature

This unit writes program data (see example below) for about the first 10 seconds of every recording. The information is then displayed about 10 seconds after playback begins.

Ready Check List

☐ The clock is set to correct time.
☐ The record tab is in place.

1 **Press ACTION*** to display MAIN MENU.

2

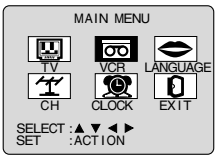

1) **Press ▲▼◀▶** to select "VCR."
2) **Press ACTION** to display SET UP VCR screen.

3

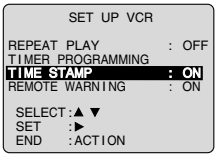

1) **Press ▲▼** to select TIME STAMP.
2) **Press ▶** to set "ON" or "OFF."

- When "OFF" is selected, the program data is written on the tape, but will not be displayed.

4 **Press ACTION** twice to return to normal screen.

<Time Stamp Example >

Normal/ One Touch Recording

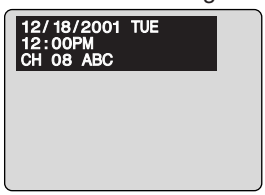

Timer Recording

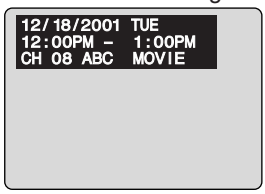

When Clock is not set...

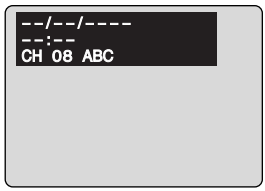

For assistance, please call : 1-800-211-PANA(7262) or send e-mail to : consumerproducts@panasonic.com

V-Chip Control Feature

*Important: if a remote control button does not work when pressed, press the COMBO button on the remote and try the button again.

Process of V-Chip Control Feature

Enter Code ⇨ **Setup** ⇨ **Blocking**

V-Chip Control Feature is...

This unit has a built-in V-Chip Control which allows you to block unwanted TV usage based on US MOVIES and US TV PROGRAMS Ratings.

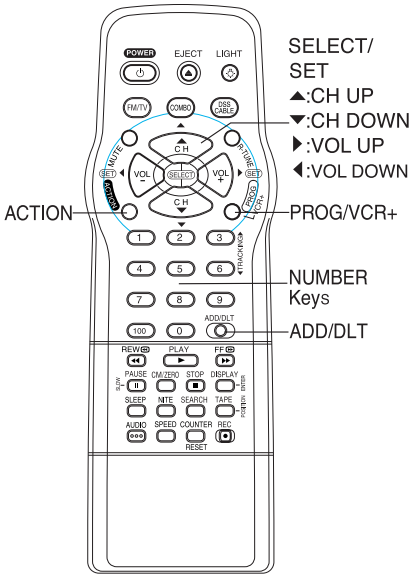

Enter Secret Code

A 4-digit code must be entered to view a blocked program or change rating settings.

1 **Press ACTION** to display MAIN MENU.

2

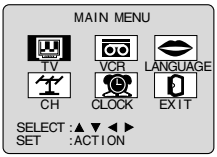

1) **Press ▲▼◀▶** to select "TV."
2) **Press ACTION** to display SET UP TV screen.

3

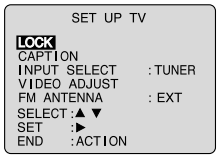

<Model PV-C2061 screen shown.>

1) **Press ▲▼** to select LOCK.
2) **Press ▶** to display screen.

4

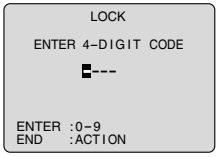

1) **Press number keys** to enter your secret code.
2) **Enter same code** again for confirmation.

To Make Corrections
Press ◀ repeatedly to move the cursor.
Press number keys to make the correction.

- Step 2) not necessary when changing rating or secret code.
- Take care that you are not observed entering the secret code.

5

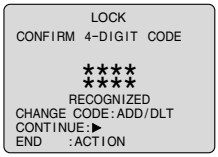

Press ▶ to display US Ratings menu (see page 38).
Or
Press ACTION three times to exit.

Changing your secret code

- You will need your current code.

Do steps **1** ~ **4**. In step **5**, press ADD/DLT to clear current code. Repeat steps **4** and **5** to enter new code.

Notes

- DO NOT forget your secret code.
- Once ratings are set, restricted tapes or programs cannot be accessed unless the secret code is entered.

V-Chip Control Feature (continued)

If LOCK menu is not displayed, do "Enter Secret Code" steps on page 37.

Setup US MOVIES Ratings

1

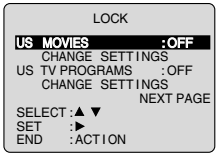

1) **Press ▲▼*** to select US MOVIES.
2) **Press ▶** to set "ON" or "OFF."

■ **"ON" → V-Chip Control is activated.**
■ **"OFF" → V-Chip Control is deactivated.**

Note

- "NEXT PAGE" displays CANADIAN V-Chip setting menu. Not necessary except when viewing Canadian tapes or broadcasts.

2

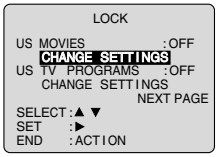

1) **Press ▲▼** to select CHANGE SETTINGS.
2) **Press ▶** to display screen.

3

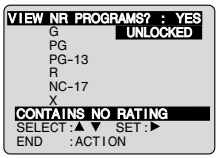

1) **Press ▲▼** to select VIEW NR PROGRAMS?.
2) **Press ▶** to set "YES" or "NO."

NR (Not Rated) PROGRAMS
Some movies, such as old movies or foreign movies usually have no ratings.

4

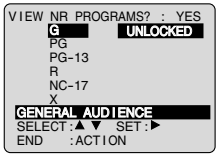

1) **Press ▲▼** to select and **▶** to set ratings to be blocked. (See ratings chart next page.)

5 **Press ACTION** to redisplay LOCK menu and continue with US TV PROGRAMS Ratings Setup (this page). Or, **press ACTION** four times to exit.

Process of V-Chip Control Feature

Enter Code ⇨ **Setup** ⇨ Blocking

Setup US TV PROGRAMS Ratings

1

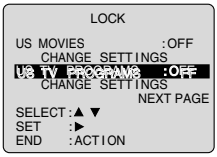

1) **Press ▲▼** to select US TV PROGRAMS.
2) **Press ▶** to set "ON" or "OFF."

■ **"ON" → V-Chip Control is activated.**
■ **"OFF" → V-Chip Control is deactivated.**

Note

- "NEXT PAGE" displays CANADIAN V-Chip setting menu. Not necessary except when viewing Canadian tapes or broadcasts.

2

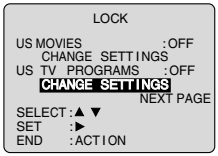

1) **Press ▲▼** to select CHANGE SETTINGS.
2) **Press ▶** to display screen.

3

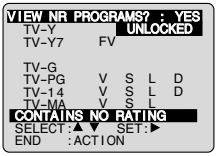

1) **Press ▲▼** to select VIEW NR PROGRAMS?.
2) **Press ▶** to set "YES" or "NO."

NR (Not Rated) PROGRAMS
Some TV shows, such as news, sports, weather, bulletins, emergency information usually have no ratings.

4

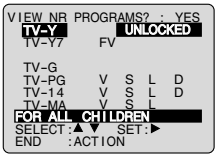

1) **Press ▲▼** to select and **▶** to set ratings to be blocked. (See ratings charts next page.)

- Ratings highlighted in Green will be blocked. Ratings in white letters will not be blocked.

Note

You may select from standard TV ratings (chart 1), or customize to a specific content rating (chart 2).

5 **Press ACTION** four times to exit this mode.

For assistance, please call : 1-800-211-PANA(7262) or send e-mail to : consumerproducts@panasonic.com

*Important: if a remote control button does not work when pressed, press the COMBO button on the remote and try the button again.

Process of V-Chip Control Feature

Enter Code ⇨ Setup ⇨ Blocking

Blocking Message

<When V-Chip Control is activated>

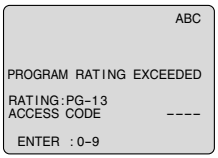

- If a program or movie exceeds the ratings you have set, a message will appear on a black background and sound is muted.

To View a Blocked Program / Movie

[Temporarily Deactivate V-Chip Control]

Enter your secret code (ACCESS CODE) in the Blocking Message screen.

- V-Chip Control is reactivated when power is turned off or power failure occurs.

[Deactivate V-Chip Control]

Enter your secret code (steps 1-4 page 37). Then, set US MOVIES and/or US TV PROGRAMS to "OFF" using ▲▼ and ▶ keys. (Ratings set on page 38 are retained and will be in effect when V-Chip Control is activated again.)



- If DISPLAY is pressed, even when V-Chip control is deactivated, rating is displayed on-screen.



- If DISPLAY is pressed, when V-Chip has not been setup, "NO V-CHIP DATA" is displayed on-screen.

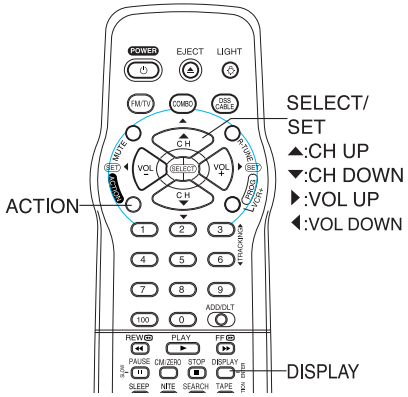

US MOVIES RATINGS

G	**GENERAL AUDIENCE:** All ages admitted.
PG	**PARENTAL GUIDANCE:** Some material may not be suitable for children.
PG-13	**PARENTS CAUTIONED:** Some material may be inappropriate for children under 13.
R	**RESTRICTED:** Children under 17 must be accompanied by a parent or adult.
NC-17	**OVER AGE 17 ONLY:** No one 17 and under admitted.
X	**ADULTS ONLY:**

US TV PROGRAMS RATINGS: Chart 1

TV-Y	**FOR ALL CHILDREN:** Content specifically geared to young viewers ages 2-6.
TV-Y7	**FOR AGE 7 AND OLDER:** May contain mild physical or comedic violence which may frighten children under 7.
TV-G	**GENERAL AUDIENCE:** Contains little or no violence, strong language, or sexual dialogue or situations.
TV-PG	**PARENTAL GUIDANCE:** May contain infrequent coarse language, limited violence, some suggestive sexual dialogue and situations.
TV-14	**PARENTS CAUTIONED:** May contain sophisticated themes, sexual situations, strong language, and more intense violence.
TV-MA	**MATURE AUDIENCE:** May contain mature themes, profane language, graphic violence, and sexual situations.

US TV PROGRAMS RATINGS: Chart 2

FV	Fantasy Violence
V	Violence
S	Sexual Situations
L	Adult Language
D	Sexually Suggestive Dialogue

Audio Features

*Important: if a remote control button does not work when pressed, press the COMBO button on the remote and try the button again.

<For Model PV-C2081 only>

Select Audio Mode for Playback

Choose the type of sound track for playback.

1 See the "**Playback a Tape**" section on page 14 to playback the tape.

2

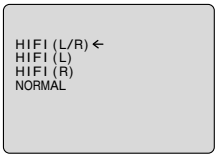

Press AUDIO repeatedly (each press within 5 seconds) to select desired mode.

- Select "HIFI (L/R)", "HIFI (L)" or "HIFI (R)" to listen to stereo recordings in stereo sound. Select "NORMAL" for monaural sound.
- This screen appears when you press AUDIO during playback.

Select Audio Mode for Recording

Choose audio mode to match recording type.

1 **Press AUDIO** repeatedly to select the audio mode according to the type of broadcast to be recorded.

- The Audio mode selected stays in effect until it is changed.

2 See the "**Record On a Tape**" section on page 14 to do a recording.

Speaker ON/OFF System

Allows you to turn off the speaker of the unit when it is connected to external audio equipment.

1 **Press ACTION*** to display MAIN MENU.

2

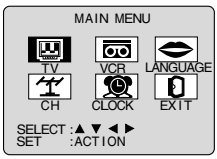

1) **Press** ▲▼◄► to select "TV."
2) **Press ACTION** to display SET UP TV screen.

3

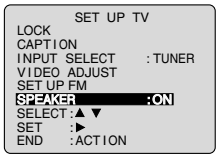

1) **Press** ▲▼ to select SPEAKER.
2) **Press** ► to set "ON" or "OFF."

- "OFF" → MUTE and VOL + - buttons do not fonction.

4 **Press ACTION** twice to end setup.

With the proper audio mode setting, your unit can:

- record and playback MTS stereo broadcast (main language) in stereo Hi-Fi. Stereo sound is recorded on the left and right audio tracks and on the video portion of a tape.
- record and playback a monaural broadcast (main language) or SAP (Secondary Audio Program, usually in a second language) on the Hi-Fi tracks for better quality monaural sound.
- playback non-Hi-Fi tapes in monaural.

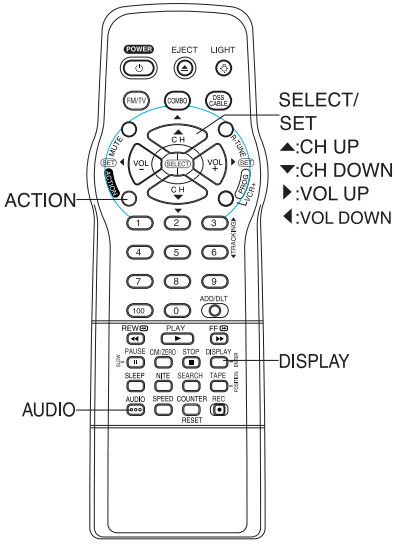

Notes

- Only tapes recorded in Hi-Fi stereo will playback with true stereo sound. Standard stereo tapes will playback with monaural sound.
- To listen to Hi-Fi stereo playback, the unit AUDIO (L/R) jacks must be connected to a stereo amp and speakers.
- There may be a difference in audio level between Hi-Fi and normal audio playback.

For assistance, please call : 1-800-211-PANA(7262) or send e-mail to : consumerproducts@panasonic.com

On-Screen Display (OSD)

VCR Status & Clock Display

Press DISPLAY
to display or remove the overlay.

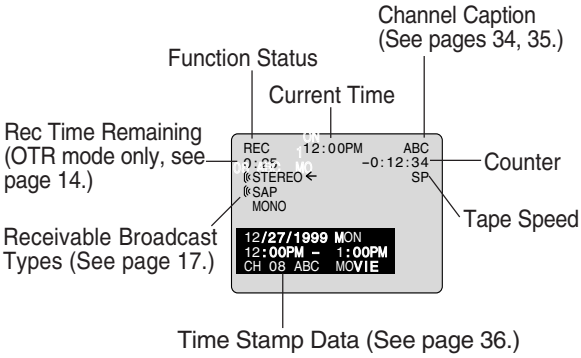

Blue Screen Display

Whenever a blank section of a tape comes up in Play mode, or when the selected channel has no broadcast signal with the Weak Signal Display set to "OFF" (see page 33), the screen will turn solid blue.

Channel & Function Display

When a function button is pressed (PLAY, FF, etc.) or you change channels, the unit mode or channel number will be displayed. (Some station names may also appear if Channel Caption is set. See pages 34, 35.)

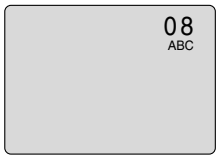

Warning and Instruction Displays

These displays will alert you to a missed operation or provide further instructions.

OSD	Caution	Page
NO CH FOUND PLEASE CHECK ANTENNA CABLE CONNECTION THEN PUSH CH UP KEY AGAIN	• If no active channels are found for CHANNEL MEMORY...	8 - 11
PLEASE SET CLOCK BEFORE PROGRAMMING	• If you attempt to set or review a Timer Recording, VCR Plus+ System Programming or set the On-Timer and the Clock is not set...	8 - 13
CHECK CASSETTE RECORD TAB	• If you press REC, and a cassette is inserted with no record tab...	4, 14
TO CANCEL TIMER REC HOLD DOWN STOP KEY FOR APPROX 3 SEC	• If you press STOP during a Timer Recording...	25
NO CASSETTE PLEASE INSERT A CASSETTE	• If you press PLAY, FF, REW, or REC without a cassette inserted...	14
REMOTE CONTROL IS SET TO DSS/CABLE MODE USE COMBO : COMBO KEY	• If you press POWER, ACTION, or PROG on the remote while in DSS or CABLE mode...	28, 29
VIDEO HEADS MAY NEED CLEANING PLEASE INSERT HEAD CLEANING CASSETTE OR REFER TO MANUAL END: PLAY KEY	• If head cleaning becomes necessary while playing back a tape...	42
VCR LOCK ACTIVATED	• If you press a function button other than STOP/EJECT or POWER while the unit is in VCR Lock mode...	33

Unit Information

*Important: if a remote control button does not work when pressed, press the COMBO button on the remote and try the button again.

Head Cleaning

Playing older or damaged tapes may eventually cause video heads to become clogged.

Head Clog Sensor

During playback this screen appears if clogging is detected. To remove screen, press PLAY on the remote or unit.

- **Use "dry" type head cleaning cassette only.** (Part No. NV-TCL30PT is recommended.)
- Follow cleaning tape directions carefully. Excessive use of head cleaning tape can shorten the video head life.
- If head clog symptoms persist, contact your nearest Factory Service Center or authorized Service Center. (See Page 44.)

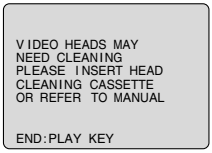

DST (Daylight Saving Time)

Unit auto adjusts clock for DST (Daylight Saving Time.)

■ **Spring (First Sunday in April)**
DST : ON ➜ Sets clock ahead one hour.

■ **Autumn (Last Sunday in October)**
DST : ON ➜ Turns clock back one hour.

- If your area does not observe Daylight Saving Time, select DST:OFF.
- Keep these time changes in mind when programming the unit for timer recordings.

Record/Playback Time

Only use tapes with the VHS mark in this unit.

Tape Speed Setting	Type of Video Cassette		
	T60	T120	T160
SP (Standard Play)	1 Hour	2 Hours	2 Hours 40 Minutes
LP (Long Play)	2 Hours	4 Hours	5 Hours 20 Minutes
SLP (Super Long Play)	3 Hours	6 Hours	8 Hours

Specifications

Display
Picture Tube: 20 inch measured diagonal 90° deflection Picture Tube

VCR
Video Recording System: 4 rotary heads helical scanning system
Audio Track: 1 track (NORMAL)
2 channel (Hi-Fi Audio Sound) (PV-C2081)

Tuner
Broadcast Channels: VHF 2 ~ 13, UHF 14 ~ 69
CABLE Channels: Midband A through I (14 ~ 22)
Superband J through W (23 ~ 36)
Hyperband AA ~ EEE (37 ~ 64)
Lowband A-5 ~ A-1 (95 ~ 99)
Special CABLE channel 5A(01)
Ultraband 65 ~ 94, 100 ~ 125

FM Radio
Band range: 87.5 ~ 108.1 MHz

FM Transmitter
Band range: 93 ~ 97, 99 ~ 103 MHz (PV-C2081)

General
Power Source: 120 V AC, 60 Hz
Power Consumption: Approx. 110 watts (Power on)
Approx. 4.0 watts (Power off)
Television System: EIA Standard NTSC color
Speaker: 2 pieces
Operating Temperature: 5 °C ~ 40 °C (41 °F ~ 104 °F)
Operating Humidity: 10 % ~ 75 %
Weight: 23 Kg (50.6 lbs.)
Dimensions: 515 (W) X 505 (H) X 474 (D) mm
20-5/16" (W) X 19-7/8" (H) X18-11/16" (D)

Note: Designs and specifications are subject to change without notice.

Features for a Quality Picture

Digital Auto Tracking
Continuously analyzes the signal and adjusts for optimum picture quality.

Manual Tracking Control (to reduce picture noise)
Use during Playback and Slow Motion mode to reduce picture noise. Press the 3 or 6 number key on the remote control or CH ▲▼* on the unit until the picture clears up. To return to Auto Tracking, press POWER off, then on again a few seconds later.

V-Lock Control
In Still mode, the 3 or 6 number key on the remote control or CH ▲▼ on the unit operate as a V-Lock control to reduce jitter.

PanaBlack™ Picture Tube
This unit uses a PanaBlack™ picture tube for better color reproduction and picture contrast.

For assistance, please call : 1-800-211-PANA(7262) or send e-mail to : consumerproducts@panasonic.com

Before Requesting Service

Check the following points once again if you are having trouble with your unit.

Power	Correction
No power…	• Completely insert Power Plug into an AC outlet. • Set POWER button to ON.
Monitor	**Correction**
No picture or sound...	• Make sure your antenna system (TV or CABLE), is correctly set. (P. 8-11) • Completely insert Power Plug into an AC outlet. • Set POWER button to ON.
Poor picture with normal sound...	• Adjust BRIGHTNESS, SHARPNESS, and PICTURE controls in the SET UP TV menu. (P. 21)
Poor sound with normal picture...	• Adjust VOLUME control. (P. 16)
Poor TV reception...	• Adjust SHARPNESS and PICTURE controls in the SET UP TV menu. (P. 21)
No color or poor color...	• Adjust TINT and COLOR controls in the SET UP TV menu. (P. 21)
Ghost (multiple) images...	• Install a directional antenna.
TV programs cannot be watched...	• Make sure the selected channel is in unit's memory. (P. 12, 13)
Channel cannot be selected...	• Only the channel being recorded can be viewed on this unit.
VCR	**Correction**
TV program cannot be recorded...	• Make sure your antenna system (TV or CABLE), is correctly set. (P. 8-11) • Make sure cassette record tab is intact. (P.4)
Timer recording cannot be performed…	• Check that clock is set to current time and date. • Make sure DSS/CABLE box (if used) is left on and tuned to channel to be recorded. • Set recording Start/Stop times correctly. (P. 24-25) • Timer recording may not be performed or continued if a power interruption of more than 1 minute occurs before or during a Timer recording even after power is restored.
No playback picture, or the playback picture is noisy or contains streaks...	• Adjust TRACKING control in either direction. (P. 42) • Try Head Cleaning. (P. 42)
VCR cannot be controlled...	• Make sure VCR LOCK is set to off. (P. 33) • Make sure unit is not in a Timer Record operation.
Remote Control	**Correction**
Unit cannot be controlled...	• Aim remote at remote sensor on unit (P. 7) so that signal is unobstructed. • Inspect the remote batteries. (P. 4) • Make sure VCR LOCK is set to off. (P. 33) • Exposing unit remote sensor to direct fluorescent or outdoor light may cause signal interference.
ACTION, PROG/VCR+ and FM/ TV buttons cannot be selected...	• Press COMBO button for COMBO mode. (P. 28) • Check remote batteries.
Miscellaneous	**Correction**
Video cassette cannot be inserted...	• Insert the cassette window side up; record tab facing you.
Video cassette cannot be removed...	• Completely insert Power Plug into an AC outlet.
Tape cannot be ejected or inserted...	• Try ejecting or inserting the tape again after turning POWER off, then back on.
Video cassette ejects when a recording is started, or the power is turned off for timer recording...	• Make sure cassette record tab is intact. (P. 4)
In Stop mode, the VCR motor (CYLINDER) continues to rotate...	• To enable Quick Play mechanism, the VCR cylinder will rotate for about 3 minutes. This reduces response time from Stop to Play mode and from Play to Rewind Search mode.
VCR cannot be controlled...	• Make sure VCR LOCK is set to off. (P. 33)

If you cannot resolve the problem, please call the Customer Satisfaction Center for product assistance at 201-348-9090.
To locate an authorized servicenter call toll free 1-800-211-PANA(7262)
or send e-mail to : consumerproducts@panasonic.com.

Service Center List

For Product Information, Operating Assistance, Literature Request, Dealer Locations, and all Customer Service inquiries please contact:
1-800-211-PANA (7262), Monday-Friday 9 am-9 pm Saturday-Sunday 9 am-7 pm, EST.
or send e-mail to : consumerproducts@panasonic.com

Web Site: http://www.panasonic.com
You can purchase parts, accessories or locate your nearest servicenter by visiting our Web Site.

Accessory Purchases:

1-800-332-5368 (Customer Orders Only)
Panasonic Services Company 20421 84th Avenue South, Kent, WA 98032
(6 am to 5 pm Monday - Friday; 6 am to 10:30 am Saturday; PST)
(Visa, MasterCard, Discover Card, American Express, Check)

Factory Servicenters Locations

CALIFORNIA
6550 Katella Avenue
Cypress, CA 90630

800 Dubuque Avenue
S. San Francisco,
CA 94080

20201 Sherman Way
Suite 102
Canoga Park,
CA 91306

3878 Ruffin Road
Suite A
San Diego, CA 92123

COLORADO
1640 South Abilene
Street Suite D
Aurora, CO 80012

FLORIDA
3700 North 29th
Avenue Suite 102
Hollywood, FL 33020

GEORGIA
8655 Roswell Road
Suite 100
Atlanta, GA 30350

ILLINOIS
9060 Golf Road
Niles, IL 60714

1703 North Randall
Road Elgin, IL 60123
(Pick-up / Drop-off
only)

MARYLAND
62 Mountain Road
Glen Burnie,
MD 21061

MASSACHUSETTS
60 Glacier Drive
Suite G
Westwood,
MA 02090

MICHIGAN
37048 Van Dyke
Avenue
Sterling Heights,
MI 48312

MINNESOTA
7850-12th Avenue
South Airport
Business Center
Bloomington,
MN 55425

OHIO
2236 Waycross Road
Civic Center Plaza
Forest Park, OH
45240

PENNSYLVANIA
2221 Cabot Blvd
West Suite B
Langhorne, PA 19047

TEXAS
13615 Welch Road
Suite 101
Farmers Branch,
TX 75244

WASHINGTON
20425-84th Avenue
South Kent,
WA 98032

HAWAII
99-859 Iwaiwa Street
Aiea, Hawaii 96701
Phone
(808) 488-1996
Fax
(808) 486-4369

Service in Puerto Rico

Matsushita Electric of Puerto Rico, Inc. Panasonic Sales Company/ Factory Servicenter:

Ave. 65 de Infanteria, Km. 9.5, San Gabriel Industrial Park, Carolina, Puerto Rico 00985
Phone (787)750-4300 Fax (787)768-2910

As of January 2000

Limited Warranty

Panasonic Consumer Electronics Company,
Division of Matsushita Electric Corporation
of America, One Panasonic Way
Secaucus, New Jersey 07094

Panasonic Sales Company,
Division of Matsushita Electric of Puerto Rico, Inc.
AVE. 65 de Infantería, Km. 9.5 San Gabriel
Industrial Park Carolina, Puerto Rico 00985

PANASONIC Video Products
Limited Warranty

Panasonic Consumer Electronics Company or Panasonic Sales Company (collectively referred to as "the Warrantor") will repair this product with new or refurbished parts, free of charge, in the USA or Puerto Rico, in the event of a defect in materials or workmanship as follows (all time periods commence from the date of the original purchase):

PRODUCT	PARTS	LABOR	SERVICE	CONTACT NUMBER
CAMCORDER	ONE (1) YEAR, EXCEPT CCD IMAGE SENSOR CCD IMAGE SENSOR - SIX (6) MONTHS	NINETY (90) DAYS NINETY (90) DAYS	Carry-In or Mail In	1-800-211-PANA(7262)
VCR	ONE (1) YEAR	NINETY (90) DAYS	Carry-In or Mail In	1-800-211-PANA(7262)
A/V MIXER	ONE (1) YEAR	NINETY (90) DAYS	Carry-In or Mail In	1-800-211-PANA(7262)
MONITOR-VCR Combination	ONE (1) YEAR, EXCEPT CRT CRT - TWO (2) YEARS	NINETY (90) DAYS CRT - NINETY (90) DAYS	Carry-In: 21" CRT and Smaller In-home or carry-in: 22" CRT and Larger	1-800-211-PANA(7262)

Batteries (if included) - New rechargeable batteries in exchange for defective rechargeable batteries for ten (10) days. Non-rechargeable batteries are not warranted.

Tape (if included) - New video cassette tape in exchange for a defective video cassette tape for five (5) days.

In-home, carry-in or mail-in service, as applicable, in the USA can be obtained during the warranty period by contacting a Panasonic Services Company (PASC) Factory Servicenter listed in the Service Directory.
Or call toll free contact number listed above, to locate an authorized PASC Servicenter. Carry-in or mail-in service in Puerto Rico can be obtained during the warranty period by calling the Panasonic Sales Company telephone number listed in the Servicenter Directory.
This warranty is extended only to the original purchaser. A purchase receipt or other proof of the date of the original purchase is requires before warranty service is rendered.

This warranty only covers failures due to defects in materials and workmanship which occur during normal use and does not cover normal maintenance, including, but not limited to, video and audio head cleaning. The warranty does not cover damage which occurs in shipment, or failures which are caused by products not supplied by the warrantor, or failures which result from accident, misuse, abuse, neglect, mishandling, misapplication, alteration, modification, faulty installation, set-up adjustments, improper antenna, inadequate signal pickup, maladjustment of consumer controls, improper operation, power line surge, improper voltage supply, lightning damage, commercial use such as hotel, office, restaurant, or other business or rental use of the product, or service by anyone other than a PASC Factory Servicenter or a PASC authorized Servicenter, or damage that is attributable to acts of God.

LIMITS AND EXCLUSIONS
There are no express warranties except as listed above.
THE WARRANTOR SHALL NOT BE LIABLE FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES (INCLUDING, WITHOUT LIMITATION, DAMAGE TO RECORDING MEDIA) RESULTING FROM THE USE OF THIS PRODUCTS, OR ARISING OUT OF ANY BREACH OF THE WARRANTY. ALL EXPRESS AND IMPLIED WARRANTIES, INCLUDING THE WARRANTIES OF MERCHANTABILITY AND FITNESS FOR PARTICULAR PURPOSE, ARE LIMITED TO THE APPLICABLE WARRANTY PERIOD SET FORTH ABOVE. Some states do not allow the exclusion or limitation of incidental or consequential damages, or limitations on how long an implied warranty lasts, so the above exclusions or limitations may not apply to you.

This warranty gives you specific legal rights and you may also have other rights which vary from state to state.

If a problem with this product develops during or after the warranty period, you may contact your dealer or Servicenter. If the problem is not handled to your satisfaction, then write to the Consumer Affairs Department at the Panasonic Consumer Electronics Company address above.

SERVICE CALLS WHICH DO NOT INVOLVE DEFECTIVE MATERIALS OR WORKMANSHIP AS DETERMINED BY THE WARRANTOR, IN ITS SOLE DISCRETION, ARE NOT COVERED.
COSTS OF SUCH SERVICE CALLS ARE THE RESPONSIBILITY OF THE PURCHASER.
warvid 8/8/2000

Como realizar la Configuración Inicial

1 **Presione POWER en el control remoto o en la unidad.**

2

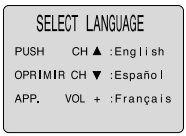

Cuando encienda el VCR por primera vez, aparecerá la pantalla SELECT LANGUAGE.

- Si ajusta el idioma incorrecto, realice los pasos de la página 9 “Reajuste de todas las Funciones de Memoria de la unidad”.
- Active la caja de cables y ajústela al canal PBS en su huso horario. Si usted utiliza receptor DSS, este debe estar apagado.

3

FIJACION AUTO. (CA/RELOJ)
CONECTE EL CABLE DE LA ANTENA Y SI ESTA USANDO UNA CAJA DE TV POR CABLE SINTONICE AL CANAL PBS DE SU LOCAL LUEGO...
POR FAVOR OPRIMIR CH UP

Presione CH ▲ para seleccionar Inglés (English).
O
Presione CH ▼ para seleccionar Español.
O
Presione VOL + para seleccionar Francés (Français).
Aparecerá la pantalla CHANNEL / CLOCK AUTO SET.

4

Presione la tecla CH ▲ para iniciar el funcionamiento de CHANNEL / CLOCK AUTO SET. El ajuste del CHANNEL / CLOCK se lleva a cabo automáticamente, si la configuración se ha terminado, se visualiza la pantalla siguiente.

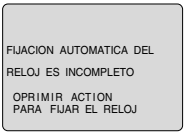

Si aparece la pantalla “FIJACION AUTOMATICA DEL RELOJ INCOMPLETO”, ajuste el reloj utilizando los procedimientos de “AJUSTE MANUAL DEL RELOJ” mostrados en la página 9.

Ajuste Manual del Reloj

Si el ajuste automático del reloj no se ha completado, ajuste el reloj manualmente de la siguiente manera:

1) Presione la tecla ACTION en el control remoto para visualizar la pantalla del menú RELOJ.
2) Presione ▲▼ para seleccionar el mes y ▶ para ajustar. De la misma forma, seleccione y ajuste la fecha, año, hora y DST (Hora de Verano).
3) Presione dos veces la tecla ACTION para poner el RELOJ en marcha y salir.

Ajustar de nuevo el reloj

1 Presione ACTION para exhiba el menú.

2

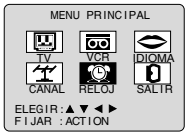

Presione ▲▼◀▶ para seleccionar “RELOJ”. Presione ACTION.

3

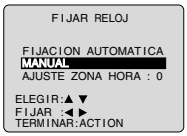

Presione ▲▼ para seleccionar “MANUAL” y luego presione ▶.

4

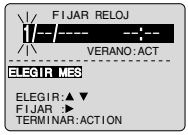

Presione ▲▼ y ◀▶ para seleccionar y ajustar la hora y la fecha.

5 Presione ACTION dos veces para que el reloj comience a funcionar y salir desde este modo.

Por ayuda, llame al 1-800-211-PANA(7262) o envie e-mail a : consumerproducts@panasonic.com

Operaciones básicas para la reproducción

1 Inserte un casete.
- El videograbador combinado se enciende automáticamente.

2 Presione PLAY.
- La reproducción comienza automáticamente si el casete no tiene la lengüeta para prevención de grabación.

■ Para encontrar una escena en particular
Búsqueda hacia adelante → Presione FF
Búsqueda hacia atrás → Presione REW
■ Para ver una imagen fija (congelada) → Presione PAUSE/SLOW
■ Para ver en cámara lenta → Mantenga pulsado el botón PAUSE/SLOW en el modo de imagen fija
■ Para ver imágenes cuadro a cuadro → Presione PAUSE/SLOW en el modo de imagen fija
■ Para parar → Presione STOP
■ Para rebobinar la cinta → Presione REW
■ Para hacer avanzar la cinta rápidamente → Presione FF
■ Para expulsar la cinta → Presione EJECT en el control remoto o STOP/EJECT en el videograbador combinado

Operaciones básicas para la grabación

1 Inserte un casete con la lengüeta para prevención de grabado.
- El videograbador combinado se enciende automáticamente.

2 Seleccione el canal.
Presione CH ▲▼ o las teclas numéricas correspondiente.

3 Seleccione la velocidad de grabación.
Presione SPEED.
SP = reproducción normal
LP = reproducción larga
SLP = reproducción super larga
- La velocidad seleccionada debe aparecer en la pantalla.

4 Comience la grabación.
Presione REC.
- Para editar partes no deseadas de una grabación, presione PAUSE/SLOW para hacer una pausa durante la grabación.
- No podrá ver otro canal durante la grabación.

■ Para parar → Presione STOP.
■ **El videograbador combinado deja de grabar a una hora prefijada.**
(Grabación de un toque)
Presione REC repetidamente para ajustar la hora de grabación (30 min - 4 horas.)



Grabación con temporizador

1 Exhiba FIJAR PROGRAMACION.
Presione PROG/VCR+.

2

Exhiba TEMPORIZADOR.
1) Presione ▲▼ para seleccionar.
2) Presione ▶ para exhibir.

- Si ya existe un programa en la memoria, presione ▲▼ y ▶ para seleccionar un número de programa sin usar.

3

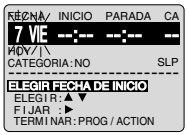

Ajuste la fecha de grabación.
1) Presione ▲▼ para seleccionar.
2) Presione ▶ o ◀ para ajustar.

- 1 - 31 = Grabación única
- DIARIO = a la misma hora de lunes a viernes
- SEMANAL = a la misma hora una vez a la semana



Repita el paso 3 para ajustar:
hora de comienzo, hora de parada, canal (o LINEA para una fuente exterior), categoría [N/O (no aplicable), DEPORTE, CINE, COMEDIA, MUSICA, DRAMA], velocidad (SP, LP, SLP)

4

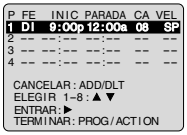

Termine el programa.
Presione PROG/VCR+ (o ACTION.)
Para introducir más programas.
presione ▲▼ y ▶ para seleccionar y ajustar el número de programa en blanco, y luego repita los pasos 3 y 4.

5 Salga de este modo.
Presione PROG/VCR+ dos veces (o ACTION.)
- Si está usando un decodificador de TV cable, asegúrese que se encuentra en el canal deseado y que la alimentación queda conectada para grabar con temporizador.
- El indicador PROG TIMER se enciende en el videograbador combinado.

INDEX

A Accessories 4
Audio Mode for FM Radio 22
Audio Mode for Playback 40
Audio Mode for Recording 40
Audio Mode for TV Viewing 17
Audio Mute 16
Auto Operation Functions 31
B Batteries 4
Before Requesting Service 43
Before Using 4
Blocking Message 39
Blue Screen Display 41
Broadcast Types 17
C Cable Box Setup 11
Cable Box Universal Remote Control Feature .. 28
Caption On Mute 20
Channel ..... 8 - 13, 41
Channel Caption 34
Clock 12
Closed Caption 20
Code Numbers, DSS / Cable Box Brand .. 29
Commercial Skip 32
Connections ..... 8 - 11
Connections, DSS / Cable Box ..... 10 -11
Connections, Outdoor Antenna ..... 8 - 9
Copy Your Tapes (Dubbing) 15
D DST (Daylight Saving Time) 42
E Eject tape 14
F Fast Forward 14
FM Radio 22
FM Transmitter 23
Forward Search 14
Frame by Frame Advance 14
Front Panel Indicators 7
Function Display 41
H Head Cleaning 42
I Important Safeguards and Precautions ... 2
Index Search 30
Initial Setup for ANT. / Cable Connection ... 8
Initial Setup for DSS / Cable box Connection .. 10
Input Mode 15
INSTANT ALARM 19
L Language ..... 8 - 13
Location of Controls ..... 6 - 7
M MTS Broadcast / TV Stereo System 17
N NIGHT Mode 16
O 100 Key 16
One Touch Recording 14
ON-TIMER with Alarm 18
P Phones 16
Playback 14
Picture Adjustment 21
Program End Search 30
Q Quality Picture 42
R Rapid Tune 16
Rec(ord) 14
Record/Playback Speed Settings 42
Remote Control Buttons 6
Remote Warning ON/OFF 33
Repeat Play 32
Reset Language, Channels, Clock 12
Reset unit 9
Reverse Search 14
Rewind 14
S Secret Code 37
Service Center List 44
SELF-DEMO Mode 4
Sleep Timer 19
Slow Motion 14
Spanish Quick Use Guide 46
Speaker ON/OFF 40
Special VCR Features 33
Specifications 42
Still Picture 14
STOP 14
T Tape Erasure Prevention 4
Tape Position Display 31
Time Stamp 36
Time Zone Adjust 13
Timer Programming using VCR Plus+ System 26
Timer Program Review, Replace, Clear 25
Timer Recording 24
Timer Recording Cancellation 25
TV Operation 16
TV Timer Features 18
U Unit, Front/Rear view 7
Universal Remote Control 28
US MOVIES/TV PROGRAMS Ratings .. 38
V VCR Lock 33
VCR Plus+ System 26
VCR Status & Clock Display 41
V-Chip Control Feature 37
W Warning and Instruction Displays 41
Warranty 45
Weak Signal Display ON/OFF 33
Z Zero Search 32

Panasonic Consumer Electronics Company,
Division of Matsushita Electric Corporation of America
One Panasonic Way Secaucus,
New Jersey 07094

Panasonic Sales Company (“PSC”),
Division of Matsushita Electric of Puerto Rico, Inc.
Ave. 65 de Infanteria. Km. 9.5
San Gabriel Industrial Park, Carolina, Puerto Rico 00985

P

Printed in U.S.A
LSQT0332A
S1200-0